



Parts List					
Ref	Class	Part	Description	Qty	Footnote
32		45490	GAUGE ASSEMBLY,OIL LEVEL (D)	1	
33	32	37291	TUBE, OIL LEVEL GAUGE	1	
34		39332A 1	COVER ASSEMBLY, PUSH ROD	1	
35	10	39783	SCREW, PUSH ROD COVER	4	
36	27	34208	GASKET, PUSH ROD COVER	1	9
37		36405	OIL PUMP ASSEMBLY	1	
--	27	34460	GASKET, OIL PUMP COVER	1	
38	10	35339	SCREW, OIL PUMP TO CYLINDER	2	
39	10	35366	SCREW, OIL PUMP SCREEN TO I	1	
40		52146	SCREEN ASSEMBLY, OIL PUMF	1	
--		60717	SUPPORT, OIL PUMP	1	
41		32720	CONNECTOR, OIL FILTER TO CY	1	
42		54111	OIL FILTER ASSEMBLY	1	
43		49951	COVER ASSEMBLY, CRANKCASE	1	SERIAL 03377341-03506318
43		59341	COVER ASSEMBLY, CRANKCASE	1	SERIAL 03506319-09999999
44	26	59342	OIL SEAL, CRANKCASE COVER	1	
45	27	49953	GASKET, CRANKCASE COVER	1	1
46	10	34277	SCREW, CRANKCASE COVER TC	8	
47		52583	OIL PAN ASSEMBLY	1	
48	27	52144	GASKET SET, OIL PAN	1	
49	10	49950	SCREW, OIL PAN TO CYLINDER	14	
50	10	34500	SCREW, OIL PAN TO CYLINDER	4	
51	10	49956	SCREW, DRAIN - OIL PAN	1	
52	27	49955	GASKET, OIL PAN DRAIN SCREW	1	