



| Parts List |       |        |                          |     |         |          |
|------------|-------|--------|--------------------------|-----|---------|----------|
| Ref        | Class | Part   | Description              | Qty | Comment | Footnote |
| 1          |       | 53272A | EXHAUST ELBOW ASSEMBLY   | 1   |         |          |
| 2          |       | 45798  | BRACKET, SUPPORT - WATER | 2   |         |          |
| 3          | 10    | 45813  | SCREW, SUPPORT BRACKET   | 4   |         |          |
| 4          | 11    | 45812  | NUT, SUPPORT BRACKET SCR | 4   |         |          |
| 5          |       | 45597  | EXHAUST BELLOWS, UPPER   | 1   |         |          |
| 6          | 54    | 32739  | CLAMP, BELLOWS ATTACHING | 4   |         |          |
| 7          |       | 45586  | WATER SHUTTER            | 1   |         |          |
| 8          | 10    | 85577  | SCREW, EXHAUST ELBOW ATT | 3   |         |          |
| 9          | 13    | 35048  | LOCKWASHER, EXHAUST ELBO | 3   |         |          |