



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-		78403A 2	ALTERNATOR (37 AMP)	1	
-		92497A 3	ALTERNATOR (55 AMP)	1	
1	390	7027	NUT, FAN AND PULLEY TO RO	1	
2	390	7033	LOCKWASHER, FAN AND PULL	1	
3	390	7017	PULLEY, DRIVE END FRAM (37	1	
3	390	8637	PULLEY, DRIVE END FRAME (5	1	
4	390	7004	FAN, DRIVE END FRAME	1	
5	390	7012	SPACER, FAN TO DRIVE END F	1	
6	390	7028	NUT, THRU BOLT ATTACHING	4	
7	390	7000	COVER ASSEMBLY, FRONT	1	
8	390	7005	BALL BEARING, DRIVE END B	2	
9	390	7006	RETAINER, DRIVE END BALL	1	
10	390	7002	STATOR ASSEMBLY (37 AMP)	1	
10	390	8636	STATOR ASSEMBLY (55 AMP)	1	
11	390	7009	DIODE RECTIFIER, NEGATIVE	1	
12	390	7010	HEAT SINK, POSITIVE	1	
13	390	7020	SLEEVE, INSULATOR	1	
14	390	7018	SLEEVE, INSULATOR	1	
15	390	7034	KEY, ROTOR	1	
16	390	7001	ROTOR ASSEMBLY (37 AMP)	1	
16	390	8635	ROTOR ASSEMBLY (55 AMP)	1	
17	390	7014	SLIP RING	1	
18	390	7206	WASHER, ROTOR SCREW	1	
19	390	7207	LOCKWASHER, ROTOR SCREW	1	
20	390	7029	SCREW, ROTOR SHAFT (5/8")	1	
21	390	7007	RETAINER, ROTOR SHAFT BE	1	
22	390	7003	COVER ASSEMBLY, REAR	1	
23	390	7035	CONDENSER	1	
24	390	7023	WASHER, REGULATOR TERMI	1	
25	390	7024	WASHER, CONDENSER TERMI	1	
26	390	7025	NUT, TERMINAL STUD	1	
27	390	7208	WASHER, TERMINAL STUD	1	
28	390	7032	LOCKWASHER, TERMINAL STL	2	
29	390	7026	NUT, TERMINAL ATTACHING	1	
30	390	7022	WASHER, CONDENSER TERMI	1	
31	390	7016	THRU BOLT (37 AMP)	4	
31	390	8638	THRU BOLT (55 AMP)	4	
32	390	7021	NUT, CONDENSER TERMINAL	1	
33	390	7011	BRUSH HOLDER ASSEMBLY	1	
34	390	7030	SCREW, BRUSH HOLDER (1/2"	2	
35	390	7008	DIODE TRI	1	