



| Parts List |       |          |                                  |     |                            |          |
|------------|-------|----------|----------------------------------|-----|----------------------------|----------|
| Ref        | Class | Part     | Description                      | Qty | Comment                    | Footnote |
| 1          |       | 95862A 5 | EXHAUST MANIFOLD (USE WITH       | 1   |                            |          |
| 1          |       | 99798A 9 | EXHAUST MANIFOLD (USE WITH       | 1   |                            |          |
| 2          | 16    | 56826    | STUD, EXHAUST MANIFOLD TO        | 4   |                            |          |
| 3          | 22    | 32802    | PLUG, PIPE - EXHAUST MANIF       | 1   |                            |          |
| 4          | 22    | 36382    | PLUG, PIPE - EXHAUST MANIF       | 1   |                            |          |
| 5          | 10    | 52143    | SCREW, EXHAUST MANIFOLD TI       | 4   |                            |          |
| 6          | 12    | 20553    | WASHER, EXHAUST MANIFOLD         | 6   |                            |          |
| 7          | 16    | 96109    | STUD, EXHAUST MANIFOLD TO        | 2   |                            |          |
| 8          | 11    | 24883    | NUT, EXHAUST MANIFOLD STUC       | 2   |                            |          |
| 9          |       | 60252A 2 | END CAP/CONNECTOR, EXHAUS        | 1   |                            |          |
| 10         | 27    | 48043    | GASKET, END CAP                  | 1   |                            | 3,4      |
| 11         | 10    | 35386    | SCREW, END CAP TO EXHAUST        | 4   |                            |          |
| 12         |       | 99179A 1 | END CAP/LIFTING EYE, EXHAUS      | 1   |                            |          |
| 13         | 27    | 73814    | GASKET, END CAP                  | 1   |                            | 3,4      |
| 14         | 10    | 59645    | SCREW, END CAP TO EXHAUST        | 4   |                            |          |
| 15         | 54    | 47483    | CLIP, END CAP SCREW              | 1   |                            |          |
| 16         | 10    | 96430    | SCREW, SHOULDER-CABLE ATT        | 1   |                            |          |
| 17         | 27    | 96429    | GASKET, EXHAUST MANIFOLD T       | 1   |                            | 3,4      |
| 18         |       | 76325A 2 | EXHAUST ELBOW ASSEMBLY           | 1   |                            |          |
| 19         | 22    | 32802    | PLUG, PIPE - EXHAUST ELBOW       | 1   |                            |          |
| 20         | 22    | 33198A 1 | PLUG, EXHAUST ELBOW              | 4   |                            |          |
| 21         | 27    | 99777    | GASKET, EXHAUST ADAPTOR          | 2   |                            | 3,4      |
| 22         |       | 12076A 1 | EXHAUST ADAPTOR                  | 1   | EXHAUST ADAPTER IS SUPERSE |          |
| 23         | 10    | 72094    | SCREW, EXHAUST ELBOW TO A        | 2   |                            |          |
| 23         | 10    | 34354    | SCREW, EXHAUST ELBOW TO A        | 2   |                            |          |
| 24         | 13    | 35048    | LOCKWASHER, EXHAUST ELBOV        | 4   |                            |          |
| 25         | 13    | 35048    | LOCKWASHER, EXHAUST MANIF        | 4   |                            |          |
| 26         | 11    | 24883    | NUT, EXHAUST MANIFOLD STUC       | 4   |                            |          |
| 27         | 32    | 47642    | HOSE, INLET (5/8" I.D.) - W/O PC | 1   |                            |          |
| 27         | 32    | 42850 64 | HOSE, INLET (3/4" I.D.) - W/O PC | 1   |                            |          |
| 28         | 54    | 32523    | CLAMP, INLET HOSE ATTACHING      | 2   |                            |          |
| 29         | 32    | 96911    | HOSE, COOLER OT DRIVE UNIT       | 1   | - W/POWER STEERING         |          |
| 30         | 32    | 96764    | HOSE, COOLER TO HOUSING - 5      | 1   | - W/POWER STEERING         |          |
| 29         | 32    | 42851    | HOSE, COOLER OT DRIVE UNIT       | 1   | - W/POWER STEERING         |          |
| 30         | 32    | 44107    | HOSE, COOLER TO HOUSING - 3      | 1   | - W/POWER STEERING         |          |
| 31         | 54    | 32523    | CLAMP, HOSE ATTACHING            | 4   | - W/POWER STEERING         |          |
| 32         |       | 96783A 1 | OIL COOLER                       | 1   | - W/POWER STEERING         |          |
| 33         | 54    | 32533    | CLAMP, OIL COOLER ATTACHING      | 2   | - W/POWER STEERING         |          |
| 34         |       | 96762A 1 | BRACKET, OIL COOLER              | 1   | - W/POWER STEERING         |          |
| 35         | 10    | 35386    | SCREW, OIL COOLER BRACKET        | 2   | - W/POWER STEERING         |          |
| 36         |       | 47697A 2 | HOUSING ASSEMBLY                 | 1   |                            |          |