



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		74436A 9	HYDRAULIC PUMP ASSEMBLY	1		
2	25	26834	"O" RING, HYDRAULIC PUMP T	4		
3		48077A 3	CONTROL VALVE ASSEMBLY	1		
3	25	26834	"O" RING, HYDRAULIC PUMP T	4	SEE REFERENCE #2	
4	22	38609	PLUG, CONTROL VALVE	1		
5	10	21091	SCREW, CONTROL VALVE TO H	4		
6	13	26992	LOCKWASHER, CONTROL VALVE	4		
7		46306A 1	BRACKET ASSEMBLY, HYDRAUL	1		
8	10	26066	SCREW, HYDRAULIC PUMP TC	3		
9	12	20546	WASHER, HYDRAULIC PUMP E	3		
10	11	35814	NUT, HYDRAULIC PUMP SCRE	3		
11	10	29877	SCREW, MOUNTING BRACKET T	1		
11	10	45765	SCREW, MOUNTING BRACKET T	2		
12	11	35814	NUT, MOUNTING BRACKET SCR	3		
13		45325	CONNECTOR AND HARNESS (GF	1		
13	84	74023	CONNECTOR AND HARNESS (GF	1		
14		45559	TERMINAL BLOCK, HYDRAULIC	1		
15	10	35519	SCREW, TERMINAL BLOCK TO H	2		
16	10	62568	SCREW, HARNESS LEADS TO TE	2		
17		52752	JUMPER WIRE, STARTER SOLEI	1		
18		25661	STARTER SOLENOID	1	SEE PHOTO FOR CORRECT SOI	
19	89	68258	STARTER SOLENOID	1	SEE PHOTO FOR CORRECT SOI	
20	13	26996	LOCKWASHER, STARTER SOLEI	2		
21	11	20645	NUT, STARTER SOLENOID TERM	2		
22	13	26993	LOCKWASHER, STARTER SOLEI	2		
23	11	20083	NUT, STARTER SOLENOID TERM	2		
23	11	68292	NUT, STARTER SOLENOID TERM	2		
24		46265	BOOT, RUBBER - STARTER SOLI	2		
25	10	34290	SCREW, STARTER SOLENOID TI	2		
25	10	69052	SCREW, STARTER SOLENOID TI	2		
27	13	26992	LOCKWASHER, STARTER SOLEI	2		
28	11	21825	NUT, STARTER SOLENOID SCRE	2		
29		74407	BRACKET, MOUNTING - STARTE	1		
30	10	21140	SCREW, MOUNTING BRACKET T	2		
31	13	26992	LOCKWASHER, MOUNTING BRA	2		
32	13	27660	LOCKWASHER, HYDRAULIC PUK	2		
33	11	24656	NUT, MOUNTING BRACKET TO F	1		
33		55642A 7	CONTROL PANEL ASSEMBLY, CC	1		
34		55642A 1	PANEL ASSEMBLY, CONTROL	1		
35	16	55422	STUD, CONTROL PANEL TO BC	4		
36	12	24676	WASHER, CONTROL PANEL ST	4		