



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1351	3635A 1	CARBURETOR ASSEMBLY, COMI	1	SERIAL 00000000-02816416	
-	1351	4032A 1	CARBURETOR ASSEMBLY, COMI	1	SERIAL 02816417-02911439	
-	1351	4293A 1	CARBURETOR ASSEMBLY, COMI	1	SERIAL 02911440-09999999	
1	1397	3852	AIR HORN	1	SERIAL 00000000-02816416	
1	3197	4256	AIR HORN	1	SERIAL 02816417-02911439	
1	1397	4336	AIR HORN	1	SERIAL 02911440-09999999	
2	1397	2256	POWER PISTON ASSEMBLY	1		
3			GASKET, AIR HORN	1		3,4,0
4	10	33043	SCREW, AIR HORN TO FLOAT	7		
5	10	33048	SCREW, AIR HORN TO FLOAT	1		
6	13	26996	LOCKWASHER, AIR HORN SCF	8		
7	11	33631	LOCK, FUEL INLET	1	SERIAL 02816417-02911439	
7	1397	4337	NUT, FUEL INLET	1	SERIAL 02911440-09999999	
7A	35	53336	FILTER, FUEL INLET	1	SERIAL 02911440-09999999	
7B	24	48143	SPRING, FUEL FILTER 1	1	SERIAL 02911440-09999999	
8			GASKET, FUEL INLET NUT	1	SERIAL 02816417-09999999	3,4,0
9	1397	2060	FLOAT ASSEMBLY	1		
10	17	33037	PIN, HINGE - FLOAT TO AIR HO	1		
11			INLET NEEDLE AND SEAT ASSE	1		4,0
12			GASKET, INLET NEEDLE AND SE	1		3,4,0
13			STRAINER, INLET NEEDLE ANI	1		3,4,0
14	1397	2993	FLOAT BOWL ASSEMBLY	1	SERIAL 00000000-02816416	
14	1397	4258	FLOAT BOWL ASSEMBLY	1	SERIAL 02816417-09999999	
15	1397	2640	VENTURI CLUSTER ASSEMBLY	1	SERIAL 00000000-02911439	
15	1397	4259	VENTURI CLUSTER ASSEMBLY,	1	SERIAL 02911440-09999999	
16			GASKET, VENTURI CLUSTER	1		3,4,0
17	10	33034	SCREW, VENTURI CLUSTER T	1		
18			GASKET, VENTURI CLUSTER SC	1		3,4,0
19	10	33033	SCREW, VENTURI CLUSTER T	2		
20	13	26995	LOCKWASHER, VENTURI CLU	2		
21			GUIDE, PUMP DISCHARGE - FL	1		0
22			SPRING, PUMP DISCHARGE - F	1		0
23			BALL, PUMP DISCHARGE - FLO	1		0
24			POWER VALVE ASSEMBLY, FLI	1		0
25			GASKET, POWER VALVE	1		3,4,0
26	1397	2994	JET, FLOAT BOWL (STANDARC	1	SERIAL 00000000-02816416	
26	1397	2447	JET, FLOAT BOWL (STANDARC	1	SERIAL 02816417-09999999	
27			STRAINER, PUMP INLET	1		0
28	1397	2048	LEVER, PUMP - AIR HORN	1		
29	10	33047	SCREW, AIR HORN PUMP LEVI	1		
30	1397	2054	PUMP SHAFT AND LEVER ASS	1		