



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		52390A	EXHAUST MANIFOLD ASSEMBLY	1		
2	16	49545	STUD, EXHAUST MANIFOLD TO	4		
3	22	68307	PLUG, PIPE - EXHAUST MANIF	1		
4	22	48118	PLUG, EXHAUST MANIFOLD	1		
5	22	32561	PLUG, PIPE - EXHAUST MANIF	1		
6	32	53370	TUBE, HEAT - EXHAUST MANIF	1		
7	10	33231	SCREW, PLUG - EXHAUST MAN	2		
8	10	52143	SCREW, EXHAUST MANIFOLD TI	4		
9	12	20553	WASHER, EXHAUST MANIFOLD	6		
10	16	52093	STUD, EXHAUST MANIFOLD TO	2		
11	11	49838	NUT, EXHAUST MANIFOLD STAU	2		
12		60252	END CAP/CONNECTOR, EXHAU	1		
13	27	48043	GASKET, END CAP/CONNECTOR	1		23
14	10	25038	SCREW, END CAP/CONNECTOR	4	SERIAL 00000000-04481625	
14	10	24234	SCREW, END CAP/CONNECTOR	4	SERIAL 04481626-09999999	
15	54	60517	CLAMP, WIRING HARNESS TO E	1	SERIAL 03332138-03462607	
15	54	60516	CLAMP, WIRING HARNESS TO E	1	SERIAL 03332138-03462607	
16	10	29240	SCREW, WIRING HARNESS CLAI	2	SERIAL 03332138-03462607	
16	10	29240	SCREW, WIRING HARNESS CLAI	2	SERIAL 03462608-09999999	
17	12	24676	WASHER, WIRING HARNESS CL	3	SERIAL 03462608-09999999	
18		54870	END CAP, EXHAUST MANIFOLD I	3	SERIAL 00000000-04481625	
18		73813A	END CAP, EXHAUST MANIFOLD I	1	SERIAL 04481626-09999999	
19	27	48043	GASKET, END CAP TO EXHAUST	1	SERIAL 00000000-04481625	23
19	27	73814	GASKET, END CAP TO EXHAUST	1	SERIAL 04481626-09999999	23
20	10	25038	SCREW, END CAP TO EXHAUST	4	SERIAL 00000000-04481625	
20	10	25299	SCREW, END CAP TO EXHAUST	4	SERIAL 04481626-09999999	
21	27	53354	GASKET, EXHAUST MANIFOLD T	1		2,23
22		60426A	EXHAUST ELBOW ASSEMBLY	1	SERIAL 00000000-04512155	
22		76351A	EXHAUST ELBOW ASSEMBLY	1	SERIAL 04512156-09999999	
23	32	58616A	TUBE, WATER SEPERATION -I	1	SERIAL 00000000-04512155	
24	22	68307	PLUG, PIPE - EXHAUST ELBOW	1		
25	22	33198	PLUG, EXHAUST ELBOW	4		
26	27	99777	GASKET, EXHAUST ELBOW TO E	1		23
27	13	37459	LOCKWASHER, EXHAUST ELBOW	4		
28	11	49838	NUT, EXHAUST ELBOW TO EXH	4		
29	32	47642	HOSE ASSEMBLY, INLET - WATE	1		
30	54	32523	CLAMP, INLET HOSE TO WATER	2		
31		47587A	BLOCK ASSEMBLY, WATER DIST	1	SERIAL 03332138-03462607	
32	22	32803	PLUG, PIPE - WATER DISTRIBL	1	SERIAL 03332138-03462607	
33	22	68307	PLUG, PIPE - WATER DISTRIBU	1	SERIAL 03332138-03462607	
34		62909A	BLOCK ASSEMBLY, WATER DIST	1	SERIAL 03462608-09999999	