



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	84	66962A 2	WIRING HARNESS< EXTERNAL	1			
1	84	86673A 2	WIRING HARNESS, EXTERNAL	1	SERIAL 00000000-05811568		
1	84	93179A 1	WIRING HARNESS, EXTERNAL	1	SERIAL 05811569-09999999		
2	10	20055	SCREW, HARNESS LEADS TO AL	1	NOT USED WITH MOTOROLA A		
3	13	26996	LOCKWASHER, HARNESS LEAD	1	NOT USED WITH MOTOROLA A		
4	12	30164	WASHER, HARNESS LEAD SCRE	1	NOT USED WITH MOTOROLA A		
5		26079	PLATE, WIRING HARNESS TO M	1			
6	10	46718	SCREW, WIRING HARNESS PLA	4			
7		63770	TAB, HARNESS ATTACHING	2	USED WITH B-84-66962A2		
8	10	35585	SCREW, HARNESS TO ROCKER	2	USED WITH B-84-66962A2		
9	12	20583	WASHER, HARNESS TO ROCKE	2	USED WITH B-84-66962A2		
10	11	68219	NUT, CIRCUIT BREAKER STUD	2			
11	88	78813	CIRCUIT BREAKER	1			
12		86924	BRACKET, CIRCUIT BREAKER	1	SERIAL 00000000-05529884		
12		90923	BRACKET, CIRCUIT BREAKER	1	SERIAL 05529885-09999999		
13	10	24637	SCREW, CIRCUIT BREAKER TO	2			
14	11	46438	NUT, CIRCUIT BREAKER ATTAC	2			
15	10	21077	SCREW, CIRCUIT BREAKER BRA	2			
16	13	37459	LOCKWASHER, CIRCUIT BREAK	2			
17		34623	OIL PRESSURE SENDER ASSEM	1			
18	13	26996	WASHER, WATER SENDER/OIL	2			
19	11	68219	NUT, WATER SENDER/OIL PRE	2			
20	22	32974	ADAPTOR, OIL PRESSURE SENC	1			
21		36525	WATER TEMPERATURE SENDEL	1			
22	89	68258	STARTER SOLENOID	1			
23	13	26993	LOCKWASHER, STARTER SOLE	2			
24	11	68292	NUT, STARTER SOLENOID TERM	2			
25	13	26996	LOCKWASHER, STARTER SOLE	2			
26	11	68219	NUT, STARTER SOLENOID TERM	2			
27	10	69028	SCREW, STARTER SOLENOID TI	2			
29	11	20664	NUT, STARTER SOLENOID SCRE	2			
30	84	94227A 2	RESISTANCE WIRE KIT	1			