



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	32703	STARTER MOTOR ASSEMBLY, C	1		
1		33324	HOUSING, DRIVE END	1		
2	23	33278	BUSHING, DRIVE END HOUS	1		
3		33292	COLLAR, THRUST-DRIVE END	1		
4	53	33290	RING, RETAINING-PINION STO	1		
5		33291	COLLAR, PINION STOP-DRIVE I	1		
6		33318	DRIVE ASSEMBLY, CLUTCH-AF	1		
7	23	33369	BUSHING, GEAR END-CLUTC	1		
8	24	33368	SPRING, CLUTCH DRIVE	1		
		33366	COLLAR, CLUTCH DRIVE	1		
10		33367	LOCKWIRE, COLLAR AND SP	1		
11	24	3306	SPRING, SHIFT LEVER TENSIO	1		
12		33320	ARMATURE	1		
13		33293	INSULATION, POLE SHOE TO F	4		
14		33282	SHOE, POLE-FIELD COIL	4		
15	10	33264	SCREW, POLE SHOE TO FIELD	4		
16	25	33302	GROMMET, FIELD COIL-FIELD F	1		
17		33301	FIELD COIL ASSEMBLY	1		
18	12	33258	WASHER, LEATHER-COMMUTA	1		
19		33295	FRAME COMMUTATOR END-LC	1		
20	10	33296	BOLT, THRU-COMMUTATOR EN	1		
21	10	33286	BOLT, THRU-COMMUTATIR EN	1		
22		33284	HOLDER, INSULATED-FIELD FF	2		
23		33283	HOLDER, FIELD FRAME BRUSH	2		
24		33270	BRUSH, FIELD FRAME	4		
25	10	32024	SCREW, BRUSH LEAD TO FIEL	4		
26		33294	SUPPORT PACKAGE, GROUND	2		
27	17	33280	PIN, GROUND AND INSULATI	1		
28		33281	LEAD, FIELD FRAME BRUSH	2		
29	10	33250	SCREW, SUPPORT TO FIELD	4		
30	13	26996	LOCKWASHER, SUPPORT SC	4		
.NU	11	30968	PORT SCREW	4		
32	24	33285	SPRING, FIELD FRAME BRUSH	2		
33	17	33257	PIN, DOWEL-FIELD FRAME TO	1		
34		33297	LEVER, SHIFT-DRIVE END HOL	1		
35		33310	SHAFT, SHIFT LEVER TO DRIV	1		
36	53	33354	RING, RETAINING-SHIFT LEVEI	1		
37		33317	PLUNGER, SHIFT LEVER-SOLE	1		
38	17	33256	PIN, PLUNGER TO SHIFT LEVEI	1		
39	24	33298	SPRING, PLUNGER RETURN-S	1		
40	10	28712	SCREW, SOLENOID SWITCH T	2		