



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
	1338	2161	CARBURETOR ASSEMBLY, COM	1		
	1338	2166	CARBURETOR ASSEMBLY, COM	.1		
1	1397	2162	AIR HORN ASSEMBLY	1		
1	1397	2168	AIR HORN ASSEMBLY	.1		
2	1397	2050	PLUG, AIR HORN	1,1		
3	24	33624	SPRING, FUEL INLET FILTER N	1,1		
4	1397	2150	FILTER, FUEL INLET - AIR HOR	1,1		
5			GASKET, FUEL INLET FILTER N	1,1		3,4,0
6			GASKET FUEL INLET FILTER N	1,1		3,4,0
7	11	33631	NUT, FUEL INLET FILTER - AIR	1,1		
8			GASKET, INLET NEEDLE AND S	1,1		3,4,0
9			INLET NEEDLE AND SEAT ASS	1,1		4,0
10	1397	2159	MAIN WELL SUPPORT ASSEMB	1,1		
10	1397	2192	MAIN WELL SUPPORT ASSEMB	.1		
11	10	33617	SCREW, MAIN WELL SUPPORT	1,1		
12	1397	2447	JET, MAIN WELL SUPPORT(ST.	1		
12	1397	2446	JET, MAIN WELL SUPPORT(ST.	.1		
13			POWER VALVE ASSEMBLY, MA	1,1		0
14	10	33622	SCREW, AIR HORN TO FLOA	4,4		
15	1397	2153	LEVER, CHOKE - CHOKE SHAF	1		
16	1397	2157	CHOKE SHAFT ASSEMBLY	1		
17	1397	2149	VALVE, CHOKE - CHOKE SHAF	1		
18	10	33045	SCREW, CHOKE VALVE TO CHI	2		
19	1397	2141	PLUG, IDLE PASSAGE - OUTER	1,1		
20	1397	2143	PLUG, IDLE PASSAGE - INNER	1,1		
21	1397	2148	PISTON, POWER - AIR HORN	1,1		
22	24	33618	SPRING, POWER PISTON	1,1		
22	24	33618	SPRING, POWER PISTON	1,1		
23	1397	2144	FLOAT ASSEMBLY	1,1		
24	17	33037	PIN, HINGE - FLOAT TO AIR HO	1,1		
25			GASKET, AIR HORN	1,1		3,4,0
26	1397	2164	FLOAT BOWL ASSEMBLY	1,1		
27			GUIDE, PUMP DISCHARGE - FL	1,1		0
28			SPRING, PUMP DISCHARGE - F	1,1		0
29			BALL, PUMP DISCHARGE - FLO	1,1		0
30			GASKET, THROTTLE BODY	1,1		4,0
31			PUMP ASSEMBLY, FLOAT BOW	1,1		4,0
32			SPRING, FLOAT BOWL PUMP F	1,1		0
33	1397	2165	THROTTLE BODY ASSEMBLY	1		
33	1397	2169	THROTTLE BDY ASSEMBLY	.1		
34	24	33621	SPRING, IDLE ADJUSTING NEE	1,1		