



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		33300	DISTRIBUTOR ASSEMBLY, COM	1,1,1,1		
2		33668	HOUSING, PRIMARY-DISTRIBU	1,1,1,1		
3	43	33664	GEAR, DRIVE MAIN SHAFT	1,1,1,1		
5	17	33649	PIN, DRIVE GEAR TO MAIN SH	1,1,1,1		
6		33767	CAM, BREAKER-ADVANCE	1,1,1,1		
-		33653	FELT, BREAKER CAM LUBRICA	1,1,1,1		
-		33670	RETAINER, BREAKER CAM LUB	1,1,1,1		
7		33768	WEIGHT, BREAKER CAM ADVAN	2,2,2,2		
8	24	33769	SPRING, BREAKER CAM ADVAN	2,2,2,2		
-		33655	PLATE, WEIGHT HOLD DOWN	1,1,1,1		
10	10	33656	SCREW, WEIGHT HOLD DOWN	2,2,2,2		
11		33665	PLATE, MOUNTING-BREAKER	1,1,1,1		
12	10	33648	SCREW, MOUNTING PLATE TC	2,2,2,2		
13		33662	CONDENSER	1,1,1,1		
14		34235	BREAKER ASSEMBLY, DISTRIB	1,1,1,1		
15	10	33650	SCREW, BREAKER ASSEMBLY	1,1,1,1		
16	25	33666	GROMMET, MOUNTING PLATE	1,1,1,1		
17		33658	LEAD, PRIMARY	1,1,1,1		
18		33659	ROTOR, DISTRIBUTOR	1,1,1,1		
19	12	36275	WASHER, ROTOR	1,1,1,1		
20		33765	DISTRIBUTOR	1,1,1,1		
21		33654	BUTTON, CARBON-DISTRIBU	1,1,1,1		
22	10	33660	SCREW, DISTRIBUTOR CAP TC	1,1,1,1		
23	10	33663	SCREW, DISTRIBUTOR CAP TC	1,1,1,1		
24	27	34486	GASKET, DISTRIBUTOR	1,1,1,1		
25		32762A 1	LEAD ASSMEBLY, HIGH TENSIO	2,2,2,2		
26		32762A 2	LEAD ASSEMBLY, HIGH TENSIO	1,1,1,1		
27		32762A 3	LEAD ASSEMBLY, HIGH TENSIO	1,1,1,1		
28		32762A 4	LEAD ASSEMBLY, HIGH TENSIO	2,2,2,2		
29		20119	PROTECTOR, HIGH TENSION I	6,6,6,6		
-	393	1275	SLEEVE, TERMINAL END COVE	6,6,6,6		
30	33	37405	SPARK PLUG (AC-44N)	6,6,6,6		
31		32784	RETAINER, HIGH TENSION LEAC	1,1,1,1		
32		32783	RETAINER, HIGH TENSION LEAC	1,1,1,1		
33		32763A 1	WIRE ASSEMBLY, DISTRIBUTOF	1,1,1,1		
34		32704	COIL ASSEMBLYH, IGNITION	1,1,1,1		
35		33321	BRACKET, IGNITON COIL MOU	1,1,1,1		
36	10	33311	SCREW, MOUNTING BRACKET	1,1,1,1		
37	54	33271	CLAMP, LOCK-IGNITION COIL T	2,2,2,2		
38	11	33277	NUT, IGNITION COIL TERMINA	1,1,1,1		
40	12	20552	WASHER, IGNITION COIL SCREW	1,1,1,1		