



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		32484	HOUSING, FLYWHEEL - REAR MI	1,1,1,		
1A		35865A 2	FLYWHEEL HOUSING ASSEMBL	...1		
2	23	35903	SPACER, FLYWHEEL HOUSING I	...1		
4	10	20705	SCREW, COVER PLATE TO FLY	...6		
5	11	29250	NUT, COVER PLATE SCREW	...6		
6	54	32807	EYE, LIFTING - FLYWHEEL HOUS	1,1,...		
6	54	34764	EYE, LIFTING - FLYWHEEL HOUS	...1,1		
7	10	26632	SCREW, FLYWHEEL HOUSING T	6,...		
7	10	26632	SCREW, FLYWHEEL HOUSING T	5,5,5		
8	10	34613	SCREW, FLYWHEEL HOUSING T	1,1,1		
9	13	37459	LOCKWASHER, FLYWHEEL HOU	6,6,6,6		
10	11	32219	NUT, FLYWHEEL HOUSING SCRI	1,1,1		
11		32786	TAB, WIRING HARNESS TO FLY	2,2,2,2		
12	54	24871	CLAMP, WIRING HARNESS TO FI	1,1,1,1		
12	54	22875	CLAMP, WIRING HARNESS TO FI	1,1,1,1		
13	10	20191	SCREW, WIRING HARNESS CLAI	2,2,2,2		
14	13	26995	LOCKWASHER, WIRING HARNE	2,2,2,2		
15		22789	"D" WASHER, WIRING HARNESS	2,2,2,2		
16	11	26419	NUT, WIRING HARNESS CLAMP	2,2,2,2		
17		33149	MOUNT, FLYWHEEL HOUSING	2,2,2,2		
18	54	32807	EYE, LIFTING - CYLINDER BLOCK	1,1,...		
18	54	34764	EYE, LIFTING - CYLINDER BLOCK	...1,1		
19	10	27165	SCREW, LIFTING EYE TO CYLINC	1,1,1,1		
20	12	20533	WASHER, LIFTING EYE SCREW	1,1,1,1		
21	38	31042	SERIAL PLATE	1,1,1,1		
22	10	20314	SCREW, DRIVE - SERIAL PLATE	2,2,2,2		
23		33090A 1	BRACKET ASSEMBLY, FRONT MI	1,1,1,		
23		36111A 2	BRACKET ASSEMBLY, FRONT I	...1		
24	12	32639	WASHER, RUBBER - FRONT M	1,1,1,		
25	12	32552	WASHER, FRONT MOUNTING I	1,1,1,		
26	23	35903	SPACER, FRONT MOUNTING E	...1		
27		32833	MOUNT, FRONT MOUNTING BR	1,1,1,1		
28		32584	BLOCK, FRONT MOUNTING BRAI	1,1,1,1		
28		35862	BLOCK, WFRONT MOUNTING BF	...1		
29		33107	BRACKET, MOUNTING - LEFT (N	1,1,...		
29		35036	BRACKET, MOUNTING - LEFT (N	...1,1		
30		33106	BRACKET, MOUNTING - RIGHT	1,1,...		
30		35132	BRACKET, MOUNTING - RIGHT	...1,1		
31	10	33112	SCREW, BRACKET AND SPACER	1,1,1,1	B-10-32557(2)	
31	10	33113	SCREW, BRACKET AND SPACER	1,1,1,1	B-10-32557(2)	
32	12	22882	LOCKWASHER, BRACKET AND S	2,2,2,2		