



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1338	2428	CARBURETOR ASSEMBLY, COMI	1,...	SERIAL 00000000-01823489	
-	1338	2431	CARBURETOR ASSEMBLY, COMI	1,...	SERIAL 00000000-01823489	
-	1338	2608	CARBURETOR ASSEMBLY, COMI	1,...	SERIAL 01823490-01830151	
-	1338	2609	CARBURETOR ASSEMBLY, COMI	1,...	SERIAL 01823490-01830151	
1	1397	2429	AIR HORN ASSEMBLY	1,1		
1	1397	2432	AIR HORN ASSEMBLY	1,1		
2	1397	2050	PLUG AIR HORN	1,1,1		
3	24	33624	SPRING, FUEL INLET FILTER N	1,1,1,1		
4	1397	2150	FILTER, FUEL INLET - AIR HOR	1,1,1,1		
5			GASKET, FUEL INLET FILTER N	1,1,1,1		3,4,5
6			GASKET, FUEL INLET FILTER N	1,1,1,1		3,4,5
7	11	33631	NUT, FUEL INLET FILTER - AIR	1,1,1,1		
8			GASKET INLET NEEDLE AND S	1,1,1,1		3,4,5
9			INLET NEEDLE AND SEAT ASS	1,1,1,1		4,5
10	1397	2430	MAIN WELL SUPPORT ASSEM	1,1		
10	1397	2433	MAIN WELL SUPPORT ASSEM	1,1		
11	10	33617	SCREW, MAIN WELL SUPPORT	1,1,1,1		
12	1397	2447	JET, MAIN WELL SUPPORT (ST	1,1		
12	1397	2446	JET, MAIN WELL SUPPORT (ST	1,1		
13			POWER VALVE ASSEMBLY, MA	1,1,1,1		
14	10	33622	SCREW, AIR HORN TO FLOAT	4,4,4,4		
15	1397	2153	LEVER, CHOKE - CHOKE SHAF	1,1		
16	1397	2157	CHOKE SHAFT ASSEMBLY	1,1		
17	1397	2149	VALVE, CHOKE - CHOKE SHAF	1,1		
18	10	33045	SCREW, CHOKE VALVE TO CHI	2,2		
19	1397	2141	PLUG, IDLE PASSGE - OUTER	1,1,1,1		
20	1397	2143	PLUG, IDLE PASSAGE - INNER	1,1,1,1		
21	1397	2148	PISTON, POWER - AIR HORN	1,1,1,1		
22	24	33618	SPRING, POWER PISTON	1,1		
23	1397	2144	FLOAT ASSEMBLY	1,1	N.L.A. - FOR REPLACEMENT, OR	
23	1397	2613	FLOAT ASSEMBLY	1,1		
24	17	33037	PIN, HINGE - FLOAT TO AIR BO	1,1,1,1		
25			GASKET, AIR HORN	1,1,1,1		3,4,5
26	1397	2164	FLOAT BOAT ASSEMBLY	1,1,1,1		
27			GUIDE, PUMP DISCHARGE - FL	1,1,1,1		5
28			SPRING, DUMP DISCHARGE - F	1,1,1,1		5
29			BALL, PUMP DISCHARGE - FLO	1,1,1,1		5
30			GASKET, THROTTLE BODY	1,1,1,1		4,5
31			PUMP ASSEMBLY, FLOAT BOW	1,1,1,1		4,5
32			SPRING, FLOAT BOWL PUMP F	1,1,1,1		5
32	1397	2165	THROTTLE BODY ASSEMBLY	1,1		