



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		35865A	FLYWHEEL HOUSING ASSEMBLY	1		
2	23	35903	SPACER, FLYWHEEL HOUSING	2		
3		35864	COVER PLATE, FLYWHEEL HO	1		
4	10	20705	SCREW, COVER PLATE TO FLY	6		
5	11	29250	NUT, COVER PLATE SCREW	6		
6	54	34764	EYE, LIFTING - FLYWHEEL HOUS	1		
7	10	26632	SCREW, FLYWHEEL HOUSING T	5		
8	10	34613	SCREW, FLYWHEEL HOUSING T	1		
9	13	37459	LOCKWASHER, FLYWHEEL HOUS	6		
10	11	32219	NUT, FLYWHEEL HOUSING SCRI	1		
11		32786	TAB, WIRING HARNESS TO FLY	2		
12	54	24871	CLAMP, WIRING HARNESS TO FI	1		
13	54	22627	CLAMP, WIRING HARNESS TO FI	1		
14	10	20191	SCREW, WIRING HARNESS CLAI	2		
15	13	26995	LOCKWASHER, WIRING HARNE	2		
16		22789	"D" WASHER, WIRING HARNE	2		
17	11	26419	NUT, WIRING HARNESS CLAMP	2		
18		33149	MOUNT, FLYWHEEL HOUSING	2		
19	54	34764	EYE, LIFTING - CYLINDER BLOCK	1		
20	10	27165	SCREW, LIFTING EYE TO CYLIND	1		
21	12	20553	WASHER, LIFTING EYE SCREW	1		
22	38	31042	SERIAL PLATE	1		
23	10	20314	SCREW, DRIVE - SERIAL PLATE	2		
24		36099A	BRACKET ASSEMBLY, FRONT M	1		
25	23	35903	SPACER, FRONT MOUNTING B	1		
26		32833	MOUNT, FRONT MOUNTING BF	1		
27		35862	BLOCK, SPACER - FRONT MOUN	1		
28	10	32557	SCREW, BRACKET AND SPACER	2		
29	13	32993	LOCKWASHER, BRACKET AND S	2		
30	12	22248	WASHER, BRACKET AND SPACE	2		
31	10	26486	SCREW, FRONT MOUNTING BR	2		
32	13	37459	LOCKWASHER, FRONT MOUNTII	2		
33	12	24675	WASHER, FRONT MOUNTING BF	2		
34	16	36100	STUD, ADJUSTING - FRONT MOL	1		
35	12	36103	WASHER, FRONT MOUNTING BF	2		
36	12	32638	WASHER, FRONT MOUNTING BF	1		
37	12	20959	WASHER, FRONT MOUNTING BF	1		
38	23	36101	SPACER, FRONT MOUNTING BR	1		
39	12	36104	WASHER, RUBBER - FRONT MOI	1		
40	11	20220	NUT, FRONT MOUNTING ADJUS	1		
41	11	22882	NUT, FRONT MOUNTING ADJUS	1		