



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		34424	WIRING HARNESS, EXTERNAL	1	SERIAL 00000000-01730326	
2		34141	VOLTAGE REGULATOR	1	SERIAL 00000000-01730326	
3		33614A 1	MOUNT ASSEMBLY, VOLTAGE R	1	SERIAL 00000000-01730326	
4	10	29238	SCREW, VOLTAGE REGULATO	3	SERIAL 00000000-01730326	
5	10	33615	SCREW, VOLTAGE REGULATO	2	SERIAL 00000000-01730326	
6	12	22887	WASHER, VOLTAGE REGULAT	4	SERIAL 00000000-01730326	
7	23	28626	SPACER, VOLTAGE REGULATC	2	SERIAL 00000000-01730326	
8	25	28627	GROMMET, VOLTAGE REGULA	2	SERIAL 00000000-01730326	
1		37709	WIRING HARNESS, EXTERNAL(A	1	SERIAL 01730327-09999999	
2A		37707	VOLTAGE REGULATOR, TRANSI	1	SERIAL 01730327-09999999	
9		37908	SCREW, VOLTAGE REGULATOR	3	SERIAL 01730327-09999999	
10	12	20028	WASHER, VOLTAGE REGULATOR	3	SERIAL 01730327-09999999	
11	54	22627	CLIP, WIRING HARNESS TO BDA	2		
12	10	22793	SCREW, WOOD - WIRING HARNI	2		
13		22789	"D" WASHER, WIRING HARNESS	2		
14	50	32703	STARTER MOTOR ASSEMBLY (F	1		
15	10	34545	BOLT, STARTER MOTOR MOUN	1		
16	10	34544	BOLT, STARTER MOTOR MOUN	1		
17	12	32648	WASHER, STARTER MOTOR BO	1		
18		32786	TAB, STARTER MOTOR SOLENO	1		
19	10	20191	SCREW, WIRING HARNESS LEA	1		
20	13	26395	LOCKWASHER, WIRING HARNE	1		
21	11	26419	NUT, WIRING HARNESS LEAD S	1		
22		34546	BRACE, STARTER MOTOR	1		
23	10	35765	SCREW, BRACE TO STARTER M	2		
24		32786	TAB WIRING HARNESS LEAD TC	1		
25	10	20191	SCREW, WIRING HARNESS LEA	1		
26	13	26395	LOCKWASHER, WIRING HARNE	1		
27	11	26419	NUT, WIRING HARNESS LEAD S	1		
28	11	28517	NUT, SOLENOID SWITCH TERMI	1		
29	11	26419	NUT, SOLENOID SWITCH TERMI	1		
30		32786	TAB, STARTER MOTOR TO CYLII	1		
31	54	26550	CLAMP, WIRING HARNESS TO S	1		
32	10	20191	SCREW, WIRING HARNESS CLIF	1		
33	13	26395	LOCKWASHER, WIRING HARNE	1		
34		22789	"D" WASHER, WIRING HARNESS	1		
35	11	26419	NUT, WIRING HARNESS CLIP SC	1		
36		34625	WATER TEMPERATURE SENDEL	1		
37	13	26396	LOCKWASHER, WATER TEMPEF	1		
38	11	20645	NUT, WATER TEMPERATURE SE	1		
39	22	22874	ADAPTOR, OIL PRESSURE SENS	1		