



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1547	2763A 6	DRIVE SHAFT HOUSING ASSEM	1	S/N: 2495185 and below	
1	1547	3546A 8	DRIVE SHAFT HOUSING ASSEM	1	S/N: 2495186 and up	
2	23	32632	BUSHING, DRIVE SHAFT HOUS	1		
3	16	46310	STUD, DRIVE SHAFT HOUSING	2		
4	22	31704	PLUG, PIPE - DRIVE SHAFT HO	1		
5	19	32652	WELCH, PLUG, DRIVE SHAFT H	1		
6	27	45821	GASKET, DRIVE SHAFT HOUSI	1		
7	11	34933	NUT, GEAR HOUSING TO DRIVE	3		
8		37829A 1	ARM ASSEMBLY, REVERSE HOO	1	SEE NOTE BELOW	
9		32520	HOOK, REVERSE	2	SEE NOTE BELOW	
10	10	32527	SCREW, REVERSE HOOKS TO R	1	SEE NOTE BELOW	
11	12	29245	WASHER, REVERSE HOOKS TO R	4	SEE NOTE BELOW	
12	11	33825	NUT, REVERSE HOOKS TO RE	1	SEE NOTE BELOW	
13	24	37827	SPRING, TENSION - REVERSE	2	SEE NOTE BELOW	
14	12	34931	WASHER, REVERSE HOOK AR	1	SEE NOTE BELOW	
15	15	32694	SCREW, REVERSE HOOK ARM TI	1	SEE NOTE BELOW	
16	24	32659	SPRING, TENSION-REVERSE HOI	1	SEE NOTE BELOW	
17		32588A 1	STOP ASSEMBLY, REVERSE HOI	1	SEE NOTE BELOW	
18	17	45574	PIN, PIVOT - REVERSE HOOK AR	1	SEE NOTE BELOW	
19		32628	SHAFT, SHIFT - INTERMEDIATE	1		
20	12	32666	WASHER, INTERMEDIATE SHIFT	1		
21	12	32665	COTTER PIN, INTERMEDIATE SF	1		
22		45807A 1	BELL HOUSING ASSEMBLY (WIT	1		
22		46734A 1	BELL HOUSING ASSEMBLY (WIT	1		
--	17	45821	GASKET, DRIVE SHAFT HOUSI	1	SEE REFERENCE #6	
23	22	33066	CONNECTOR, WATER HOSE T	1		
24	22	31125	CONNECTOR, SHIFT CABLE - B	1	SEE NOTE BELOW	
25	10	25612	SCREW, DRIVE - BELL HOUSIN	8		
26		31014	BUMPER, BELL HOUSING	1		
27	23	35088	BUSHING, BELL HOUSING (5/8	1		
28	26	45587	OIL SEAL, BELL HOUSING	1		
29	23	45588	BUSHING, BELL HOUSING (5/1	1		
30	27	35982	GASKET, RUBBER - BELL HOU:	1		
31	25	33504	"O" RING, BELL HOUSING	1		
32	12	38000	WASHER, SYNTHANE - BELL H	2		
33	16	35937	STUD, BELL HSG. TO DRIVE SH	6		
34	16	35935	WASHER, BELL HOUSING STUD	6		
35	11	34933	NUT, BELL HOUSING STUD	6		
36	10	36398	SCREW, PLUG - BELL HOUSING	2		
37	22	31345	FITTING, GREASE - BELL HOUSI	2		
38		28259	LUBRICATE, BELL HOUSING GRI	2		