



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		33300	DISTRIBUTOR ASSEMBLY, COM	1	SERIAL 00000000-02233574	
1		48020	DISTRIBUTOR ASSEMBLY, COM	1	SERIAL 02326096-02494926	
1		52277	DISTRIBUTOR ASSEMBLY, COM	1	SERIAL 02494927-09999999	
2		33668	HOUSING, PRIMARY - DISTRIB	1		
3	43	33664	GEAR, DRIVE - MAIN SHAFT	1		
4		33766	MAIN SHAFT AND WEIGHT PL	1	SERIAL 00000000-02233574	
4		48022	MAIN SHAFT AND WEIGHT PL	1	SERIAL 02326096-02494926	
4		52278	MAIN SHAFT AND WEIGHT PL	1	SERIAL 02494927-09999999	
5	17	33649	PIN, DRIVE GEAR TO MAIN SH	1		
6		33767	CAM, BREAKER - ADVANCE	1	SERIAL 00000000-02494926	
6		52279	CAM, BREAKER - ADVANCE	1	SERIAL 02494926-09999999	
6		33653	FELT, BREAKER CAM LUBRICA	1		
6		33670	RETAINER, BREAKER CAM AD	1		
7		33768	WEIGHT, BREAKER CAM ADVA	2	SERIAL 00000000-02494926	
7		33651	WEIGHT, BREAKER CAM ADVA	2	SERIAL 02494926-09999999	
8	24	33769	SPRING, BREAKER CAM ADVAN	2	SERIAL 00000000-02494926	
8	24	52280	SPRING, BREAKER CAM ADVAN	2	SERIAL 02494926-09999999	
9		33655	PLATE, WEIGHT HOLD DOWN	1		
10	10	33722	SCREW, WEIGHT HOLD DOWN	2		
11		33665	PLATE, MOUNTING - BREAKER	1		
12	10	33648	SCREW, MOUNTING PLATE PF	2		
13		33662	CONDENSER	1		
13		48024	BRACKET, CONDENSER MOUN	1	SERIAL 02326096-09999999	
13	10	48021	SCREW, CONDENSER BRACKE	1	SERIAL 02326096-09999999	
14		34235	BREAKER ASSEMBLY, DISTRIB	1		
15	10	33650	SCREW, BREAKER ASSEMBLY	1		
16	25	33666	GROMMET, MOUNTING PLATE	1		
17		33658	LEAD, PRIMARY	1	SERIAL 00000000-02233574	
17		48025	LEAD, PRIMARY	1	SERIAL 02326096-09999999	
18		33659	ROTOR, DISTRIBUTORE	1		
19	12	36275	WASHER, ROTOR	1		
20		33765	CAP, DISTRIBUTOR	1		
21		33654	BUTTON, CARBON - DISTRIB	1		
22	10	33660	SCREW, DISTRIBUTOR CAP TC	1		
23	10	33663	SCREW, DISTRIBUTOR CAP TC	1		
24	27	34486	GASKET, DISTRIBUTOR	1		
25		32762A 1	LEAD ASSEMBLY, HIGHT TENSIO	2		
26		32762A 2	LEAD ASSEMBLY, HIGHT TENSIC	1		
27		32762A 3	LEAD ASSEMBLY, HIGHT TENSIC	1		
28		32762A 4	LEAD ASSEMBLY, HIGHT TENSIC	2		
29		47604A 1	PROTECTOR, HIGHT TENSIC	1		