



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1		39922	BODY, EXHAUST MANIFOLD	1			
2	16C	49915	STUD, EXHAUST MANIFOLD TO	6			
3	12	20553	WASHER, EXHAUST MANIFOLD	8			
4	13	37459	LOCKWASHER, EXHAUST MANIF	8			
5	11	49910	NUT, EXHAUST MANIFOLD STU	8			
6		39916	END CAP, EXHAUST MANIFOLD	1			
7	27	39923	BASKET, END CAP	1			
8	10	35388	SCREW, END CAP TO EXHAUST	4			
9	22	32802	PLUG, PIPE - EXHAUST MANIFOL	1			
10	54	28938	CLAMP, WIRING HARNESS TO E	1			
11	10	20031	SCREW, WIRING HARNESS TO E	1			
12	13	26992	LOCKWASHER, WIRING HARNE	1			
13	32	45042	HOSE, INLET - WATER DISTRIBL	1			
14	54	32779	CLAMP, INLET HOSE TO WATER	2			
15	22	48118	PLUG, EXHAUST MANIFOLD (1-3,	2			
16	54	22740	CLAMP, WIRING HARNESS TO E	1			
17	10	22028	SCREW, WIRING HARNESS CLAI	1			
18	13	26996	LOCKWASHER, WIRING HARNE	1			
19		22789	"D" WASHER, WIRING HARNE	1			
20	10	25299	SCREW, WATER PUMP FLANGE	1			
21		47638	END CAP/CONNECTOR, EXHAUS	1			
22	27	39917	GASKET, END CAP/CONNECTOR	1			
23	10	39970	SCREW, END CAP/CONNECTOR	2			
24	10	35388	SCREW, END CAP/CONNECTOR	4			
25	54	26551	RETAINER, END CAP/CONNECT	1			
26	10	25231	CLIP, WIRING HARNESS TO RET	1			
27	10	26548	SCREW, WIRING HARNESS CLIF	1			
28		22789	"D" WASHER, WIRING HARNE	1			
29	27	47587A 2	BLOCK ASSEMBLY, WATER DIST	1			
30	10	33680	GASKET, WATER DISTRIBUTION	1			
31	22	21077	SCREW, WATER DISTRIBUTION	2			
32	27	32803	PLUG, PIPE - WATER DISTRIBU	1			
33	27	47594	THERMOSTAT	1			
34	27	47590	GASKET, THERMOSTAT COVER	1			
35	10	47588	COVER, THERMOSTAT - WATER	1			
36	32	53512	SCREW, THERMOSTAT COVER	2			
37	54	47639	HOSE, WATER DISTRIBUTION B	1			
38	22	32880	CLAMP, HOSE TO WATER DISTR	2			
39	22	53509	ELBOW, WATER DISTRIBUTION	1			
40	22	47640	HOSE, WATER DISTRIBUTION B	1			