



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		39544	WIRING HARNESS, EXTERNAL	1	SERIAL 00000000-02768031	
1		56386	WIRING HARNESS, EXTERNAL	1	SERIAL 02768032-09999999	
2		39589	BRACKET, MOUNTING-BALLAST	1	SERIAL 00000000-02768031	
3	10	28464	SCREW, BRACKET AND FLYWHE	1	SERIAL 00000000-02768031	
3	10	45754	SCREW, BRACKET AND FLYWHE	1	SERIAL 00000000-02768031	
4		26079	PLATE, WIRING HARNESS TO M	1		
5	10	46718	SCREW, WIRING HARNESS PLA	4		
6		47764	STRAP, NYLON-STARTER SOLE	1		
7		45108	BATTERY CABLE, POSITIVE LUG	1		
7		45107	BATTERY CABLE, NEGATIVE LUG	1		
8		37707	VOLTAGE REGULATOR, TRANSI	1	SERIAL 00000000-02768031	
9	10	37908	SCREW, VOLTAGE REGULATOR	3	SERIAL 00000000-02768031	
10	12	20028	WASHER, VOLTAGE REGULATO	3	SERIAL 00000000-02768031	
11	54	22875	CLIP, WIRING HARNESS TO BOA	2		
12	10	22793	SCREW, WOOD - WIRING HARNE	2		
13		22789	"D" WASHER, WIRING HARNE	2		
14		34625	WATER TEMP. SENDER ASSEME	1	SERIAL 00000000-02233574	
14		36525	WATER TEMP. SENDER ASSEME	1	SERIAL 02326096-09999999	
15	13	26996	WASHER, WATER SENDER/OIL	2	TERMINAL (#10)	
16	11	20645	NUT, WATER SENDER AND OIL	2		
17	22	32974	ADAPTOR, OIL PRESSURE SENC	1		
18	22	29085	FITTING, OIL PRESSURE SENDE	1	2494927,	
19		34623	OIL PRESSURE ASSEMBLY	1		
20		25661	STARTER SOLENOID	1		
21	13	26993	LOCKWASHER, STARTER SOLEI	2		
22	11	20083	NUT, STARTER SOLENOID TERM	2		
23	13	26996	LOCKWASHER, STARTER SOLEI	2		
24	11	20645	NUT, STARTER SOLENOID TERM	2		
25		36177	INSULATOR, STARTER SOLENO	1		
26		36176A	BRACKET ASSEMBLY, STARTER	1		
27		49342	BUMPER, MOUNTING BRACKET	1		
28	10	29197	SCREW, MOUNTING BRACKET T	2	ALUM. MANIFOLD	
28	10	33231	SCREW, MOUNTING BRACKET T	2	CAST IRON MANIFOLD	
29	13	26993	LOCKWASHER, MOUNTING BRA	2	CAST IRON MANIFOLD	
30	10	21625	SCREW, STARTER SOLENOID TI	2		
31	13	26992	LOCKWASHER, STARTER SOLEI	2		
32	11	20088	NUT, STARTER SOLENOID SCRE	2		