



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		45892A 2	FLYWHEEL HOUSING ASSEMBLY	1	SERIAL 00000000-02768031	
1		55898A 2	FLYWHEEL HOUSING ASSEMBLY	1	SERIAL 02768032-09999999	
1	23	46742	SPACER, FLYWHEEL HOUSING	2		
3		35864	COVER PLATE, FLYWHEEL HO	1		
4	10	20705	SCREW, COVER PLATE TO FLY	6		
5	11	46793	NUT, COVER PLATE SCREW	6		
6	54	34764	EYE, LIFTING - FLYWHEEL HOUS	1		
7	10	26632	SCREW, HOUSING TO CYLINDER	4	SERIAL 00000000-02768031	
8	10	28464	SCREW, HOUSING TO CYLINDER	1	SERIAL 00000000-02768031	
8	10	45754	SCREW, HOUSING TO CYLINDER	1	SERIAL 00000000-02768031	
7	10	26632	SCREW, HOUSING TO CYLINDER	5	SERIAL 02768032-09999999	
8	10	34613	SCREW, HOUSING TO CYLINDER	1	SERIAL 02768032-09999999	
9	13	37459	LOCKWASHER, HOUSING SCREW	6	SERIAL 02768032-09999999	
10	11	28517	NUT, BRACKET AND FLYWHEEL	1		
11		32786	TAB, WIRING HARNESS TO FLY	2		
12	54	24871	CLAMP, WIRING HARNESS TO FI	1		
13	10	22028	SCREW, WIRING HARNESS CLAI	1		
14	13	26996	LOCKWASHER, WIRING HARNE	1		
15		39974	CONNECTOR, HARNESS LEAD	2	QUANTITY OF 4 SERIAL 027680	
16	10	37892	SCREW, CONNECTOR TO FLYWI	2	QUANTITY OF 4 SERIAL 027680	
17		33149	MOUNT, FLYWHEEL HOUSING	2		
18	54	34764	EYE, LIFTING - CYLINDER BLOCK	1		
19	10	27165	SCREW, LIFTING EYE TO CYLINC	1		
20	13	37459	WASHER, LIFTING EYE SCREW	1		
21	38	31042	SERIAL PLATE	1		
22	10	20314	SCREW, DRIVE - SERIAL PLATE	2		
23		36099A 2	BRACKET ASSEMBLY, FRONT MI	1		
24	23	46742	SPACER, FRONT MOUNTING B	1		
25		32833	MOUNT, FRONT MOUNTING BF	1		
26		35862	BLOCK, SPACER - FRONT MOU	1		
27	10	32557	SCREW, BRACKET AND SPACER	2		
28	13	32993	LOCKWASHER, BRACKET AND S	2		
29	12	22248	WASHER, BRACKET AND SPACE	2		
30	10	26486	SCREW, FRONT MOUNTING BR	2		
31	13	37459	LOCKWASHER, FRONT MOUNTII	2		
32	12	37828	WASHER, FRONT MOUNTING BF	2		
33	16	36100	STUD, ADJUSTING - FRONT MOL	1		
34	12	36103	WASHER, FRONT MOUNTING BF	2		
35	12	32638	WASHER, FRONT MOUNTING B	1		
36	12	20959	WASHER, FRONT MOUNTING BF	1		
37	22	26101	SPACER, FRONT MOUNTING BR	1		