



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		49701A	2 PLATE ASSEMBLY,TRANSOM (w	1		
1		65550A	2 PLATE ASSEMBLY,TRANSOM (w	1		
2	10	37269	SCREW,TRANSOM PLATE TO GI	2		
3	10	37268	SCREW,TRANSOM PLATE TO GI	2		
4	13	37272	LOCKWASHER,TRANSOM PLATE	4		
5	12	37271	WASHER,SQUARE-TRANSOM PL	2		
6	10	36289	SCREW,TRANSOM PLATE TO EN	2		
7	12	28421	WASHER,TRANSOM PLATE SCR	2		
8	23	36290	SPACER,TRANSOM PLATE SCRE	2		
9	12	32834	WASHER,TRANSOM PLATE SCR	2		
10	13	33734A	1 LOCKWASHER,TRANSOM PLATE	2		
11	11	20220	2 NUT,TRANSOM PLATE TO ENGI	2		
12	12	21900	2 WASHER,GIMBAL HOUSING TO	2		
13	11	34087	2 NUT,GIMBAL HOUSING TO TRAN	2		
14	32	35015	1 TUBE,STEERING CABLE GUIDE	1		
15	11	37984	2 NUT,JAM-STEERING CABLE GUI	2		
16	12	37985	2 WASHER,STEERING CABLE GUI	2		
17		49518A	1 CABLE ASSEMBLY,SHIFT ACUAT	1	SERIAL 00000000-03780849	
18		38399A	2 CORE WIRE,INNER SHIFT CAB	1	SERIAL 00000000-03780849	
19	32	38377	1 TUBE,SHIFT ACUATING CABL	1	SERIAL 00000000-03780849	
17		66065A	1 CABLE ASSEMBLY,SHIFT ACUAT	1	SERIAL 03780850-04425519	
18		66069A	2 CORE WIRE,INNER SHIFT CAB	1	SERIAL 03780850-04425519	
19	32	38377	1 TUBE,SHIFT ACUATING CABL	1	SERIAL 03780850-04425519	
17		73679A	2 CABLE ASSEMBLY,SHIFT ACUAT	1	SERIAL 04425520-09999999	
18		66069A	2 CORE WIRE,INNER SHIFT CAB	1	SERIAL 04425520-09999999	
19	32	38377	1 TUBE,SHIFT ACUATING CABL	1	SERIAL 04425520-09999999	
20		29880	1 GUIDE,SHIFT ACUATING CABLE	1		
21		20007	1 ANCHOR,SHIFT ACUATING CABL	1		
22	10	20518	2 SCREW,SET-ANCHOR TO ACTIA	2		
23		38473	1 WRAPPING,SHIFT ACTUATING C	1		
24	32	34049	1 TUBE,NYLON-SHIFT ACTUATING	1		
25		33981	1 SLIDE,SHIFT ACTUATING CABLE	1		
26	10	31700	1 SCREW,SET-SHIFT ACTUATING	1		