



| Parts List | | | | | | |
|------------|-------|--------|------------------------------|-----|-------------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 88475A | 5 HYDRAULIC PUMP ASSEMBLY (F | 1 | | |
| 1 | | 93247A | 4 HYDRAULIC PUMP ASSEMBLY (F | 1 | | |
| 1 | | 79271A | 4 HYDRAULIC PUMP ASSEMBLY (N | 1 | | |
| 2 | 25 | 48171 | "O" RING, HYDRAULIC PUMP T | 4 | | |
| 3 | | 48077A | 3 CONTROL VALVE ASSEMBLY | 1 | NOT USED WITH B-93247A4 | |
| - | 25 | 48171 | "O" RING, PUMP TO VALVE (SE | 4 | NOT USED WITH B-93247A4 | |
| 4 | 22 | 38609 | PLUG, CONTROL VALVE | 1 | NOT USED WITH B-93247A4 | |
| 5 | 10 | 69086 | SCREW, CONTROL VALVE TO H | 4 | NOT USED WITH B-93247A4 | |
| 6 | 13 | 26992 | LOCKWASHER, CONTROL VALVE | 4 | NOT USED WITH B-93247A4 | |
| 7 | | 94225A | 1 BRACKET ASSEMBLY, HYDRAUL | 1 | | |
| 8 | 10 | 26066 | SCREW, HYDRAULIC PUMP TC | 4 | | |
| 9 | 12 | 20546 | WASHER, HYDRAULIC PUMP E | 4 | | |
| 10 | 11 | 35814 | NUT, HYDRAULIC PUMP SCRE | 4 | | |
| 11 | 16 | 87372 | STUD, MOUNTING BRACKET TO | 3 | | |
| 12 | 11 | 35814 | NUT, MOUNTING BRACKET STU | 3 | | |
| 13 | | 88893A | 4 BRACKET ASSEMBLY, FLOOR M | 1 | | |
| 14 | | 58491 | BUMPER, RUBBER-PUMP MC | 2 | | |
| 15 | 10 | 59784 | SCREW, PUMP MOUNTING BRAI | 6 | | |
| 16 | 12 | 29245 | WASHER, PUMP MOUNTING BR | 6 | | |
| 17 | | 45377 | BRACKET, TRANSOM MOUNTIN | 2 | | |
| 18 | 10 | 24234 | SCREW, HYDRAULIC PUMP TO | 4 | | |
| 19 | 13 | 39107 | LOCKWASHER, HYDRAULIC PUK | 4 | | |
| 20 | 11 | 21908 | NUT, HYDRAULIC PUMP SCREW | 4 | | |
| 21 | 10 | 68298 | SCREW, PUMP MOUNTING BRAC | 2 | | |
| 22 | 11 | 35304 | NUT, PUMP MOUNTING BRACKE | 2 | | |