



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	5356A20	GEAR HOUSING ASSY, COMP. S	1		
1	1623	5356A 4	GEAR HOUSING ASSEMBLY	1		
2	17	37972	PIN, SHIFT CRANK-GEAR HOI	1		
3	16	46911	STUD, GEAR HOUSING TO D	1		
4	16	56298	STUD, GEAR HOUSING TO D	2		
5	26	45577	SEAL, GEAR HOUSING	1		15,18,17
6	16	56297	STUD, WATER PUMP BASE A	1		
7	16	69501	STUD, WATER PUMP BASE A	2		
8	17	85500	PIN, DOWEL-GEAR HOUSING	2		
9	31	92366	BEARING, ROLLER-DRIVE SF	1		22
10		66884	INSERT, WATER PICKUP (ST.	1		
10		66885	INSERT, WATER PICKUP (PO.	1		
11	10	76156	SCREW, INSERT TO GEAR H	1		
12	11	45812	NUT, INSERT SCREW	1		
13	45	55757A 1	DRIVE SHAFT ASSEMBLY	1		
14	17	30545	PIN, DRIVE SHAFT	1		
15	24	34576	SPRING, COMPRESSION-DRIF	1		
16	25	30613	"O" RING, UPPER-DRIVE SHAF	1		15,18
17	43	96084A 4	GEAR SET (INCLUDES PINION.	1		22
18	11	35921	NUT, PINION GEAR TO DRIVE	1		
19	15	57007A 1	SHIM, DRIVE SHAFT BEARING	AR		
20	31	53079A 1	TAPERED ROLLER BEARING A	1		
21	27	33146	GASKET, WATER PUMP BASE	1		15,18
22	25	33145	"O" RING, WATER PUMP BASE	1		15,18
23	46	57234A 1	WATER PUMP BASE ASSEMBL	1		
24	26	89238	OIL SEAL, WATER PUMP BAS	1		15
25	26	79884	OIL SEAL, WATER PUMP BAS	1		15
26	17	35973	DOWEL PIN, WATER PUMP E	2		
27	27	32433	GASKET, LOWER-WATER PUM	1		15,18
28	27	32435	PLATE, FACE-WATER PUMP B	1		18
29	27	32434	GASKET, UPPER-FACE PLATE	1		15,18
30	46	64141A 1	WATER PUMP BODY ASSEMBL	1		18
31		48752	INSERT, WATER PUMP BOD	1		18
33	26	38970	SEAL, RUBBER-WATER INLE	1		18,17
34	47	89984	IMPELLER, WATER PUMP	1		18
35	28	56654	PIN, IMPELLER DRIVE	1		18
36	10	30720	SCREW, WATER PUMP BODY	1		
37	12	36001	WASHER, WATER PUMP BOD	1		
38	11	35888	NUT, WATER PUMP BODY STL	2		
39	11	45592	NUT, WATER PUMP BODY STL	1		
40	12	28245	WASHER, WATER PUMP BOD	2		