



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	79822A 2	STARTER MOTOR ASSEMBLY(DI)	1		
2	10	34545	BOLT, STARTER MOUNTING (42	1		
3	10	34544	BOLT, STARTER MOTOR MOUN'	1		
4		88292	BRACE, STARTER MOTOR	1		
5	16	88294	STUD, STARTER MOTOR BRACE	1		
6	12	29245	WASHER, STARTER MOTOR TH	1		
7	11	29031	NUT, STARRTER MOTOR THRU	1		
7	11	88293	NUT, STARTER MOTOR BRACE	1		
8	11	32219	NUT, SOLENOID SWITCH TERMI	1		
9	13	26995	LOCKWASHER, STARTER MOTO	2		
10	11	26419	NUT, STARTER MOTOR TERMIN	2		
9	13	26996	LOCKWASHER, STARTER MOTO	2		
10	11	68219	NUT, STARTER MOTOR TERMIN	2		
10	11	32219	NUT, STARTER MOROT TERMIN	1		
11		78403A 2	ALTERNATOR (MORTOROLA #8)	1		
12		56224	BRACE, ALTERNATOR TO CYLIN	1		
13	16	54177	STUD, ALTERNATOR BRAVE TO	1		
14	12	20553	WASHER, ALTERNATOR BRACE	1		
15	11	23161	NUT, ALTERNATOR BRACE STU	1		
16	10	29198	SCREW, ALTERNATOR (7/8")	1		
17	12	26168	WASHER, ALTERNATOR BRACE	1		
18	10	56057	SCREW, ALTERNATOR TO BRAC	1		
19	23	45353	SPACER, ALTERNATOR SCREW	1		
20	11	23161	NUT, ALTERNATOR SCREW	1		
21	13	26991	LOCKWASHER, ALTERNATOR TI	1		
22	11	68531	NUT, ALTERNATOR TERMINAL	1		
23		52817	BRACKET, ALTERNATOR MOUN'	1		
24		52818	BRACKET, ALTERANTOR MOUN'	1		
25	16	54177	STUD, MOUNTING BRACKET TO	1		
26	16	54176	STUD, MOUNTING BRACKET TO	1		
27	12	20553	WASHER, MOUNTING BRACCKE	2		
28	11	23161	NUT, MOUNTING BRACKET STU	2		
29	27	53502	GASKET, ALTERNATOR MOUNTI	1		
30	10	33524	SCREW, ALTERNATOR MOUNTII	1		
31	13	26993	LOCKWASHER, ALTERNATOR M	1		
32	12	26825	WASHER, ALTERNATOR MOUNT	1		
33	84	78581A 1	ALTERNATOR HARNESS ASSEM	1	USED WITH B-84-66963A1 HARI	
34	88	79023A90	FUSE ASSEMBLY, 90 AMP	1	USED WITH B-84-66963A1 HARI	
34A	84	79139A 6	JUMPER WIRE, 90 AMP FUSE TC	1	USED WITH B-84-66963A1 HARI	
35	12	24669	LOCKWASHER, FUSE STUD	1	USED WITH B-84-66963A1 HARI	
36	11	21825	NUT, FUSE STUD	1	USED WITH B-84-66963A1 HARI	