



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		58759A	EXHAUST MANIFOLD ASSEMBLY	1		
2	16	49545	STUD, EXHAUST MANIFOLD TO	4		
3	22	48118	PLUG, EXHAUST MANIFOLD	4		
4	22	32802	PLUG, PIPE - EXHAUST MANIF	1		
5	22	32561	PLUG, PIPE - EXHAUST MANIF	1		
6	16	54177	STUD, ALTERNATOR BRACE A	1		
7	32	55644	TUBE, HEAT - EXHAUST MANIF	1		
8	10	69052	SCREW, EXHAUST MANIFOLD	2		
9	16	52093	STUD, EXHAUST MANIFOLD TO	2		
10	10	52143	SCREW, EXHAUST MANIFOLD TI	4		
11	12	20553	WASHER, EXHAUST MANIFOLD	6		
12	11	49838	NUT, EXHAUST MANIFOLD STUC	2		
13	54	60517	CLAMP, WIRING HARNESS TO E	1		
13	54	60516	CLAMP, WIRING HARNESS TO E	1		
14	10	29240	SCREW, WIRING HARNESS CLAI	3		
15	12	24676	WASHER, WIRING HARNESS CLA	3		
17		73813A	END CAP, EXHAUST MANIFOLD I	1		
18	27	73814	GASKET, END CAP TO EXHAUST	1		2
19	10	25299	SCREW, END CAP TO EXHAUST	4		
20	27	46401	GASKET, EXHAUST MANIFOLD T	1		2,4
21		76351A	EXHAUST ELBOW ASSEMBLY	1		
23	22	33198	PLUG, EXHAUST ELBOW (3/4-I	4		
24	22	32802	PLUG, PIPE - EXHAUST ELBOW	1		
25	27	52076	GASKET, EXHAUST ELBOW TO E	1		2
26	13	37489	LOCKWASHER, EXHAUST ELBOW	4		
27	11	49838	NUT, EXHAUST ELBOW TO EXH	4		
28		60252	END CAP/CONNECTOR, EXHAUS	1		
29	27	48043	GASKET, END CAP/CONNECTOR	1		2
30	10	37562	SCREW, END CAP/CONNECTOR	4		
33	32	52481	HOSE, WATER DISTRIBUTION B	1		
34	54	32780	CLAMP, HOSE TO WATER DISTF	2		
35		47587A	BLOCK ASSEMBLY, WATER DIST	1		
36	22	32803	PLUG, PIPE - WATER DISTRIBL	1		
36	22	32802	PLUG, PIPE - WATER DISTRIBU	1		
37	22	53509	ELBOW, WATER DISTRIBUTION	1		
38		59078	THERMOSTAT	1		
39		60372A	COVER ASSEMBLY, THERMOSTA	1		
40	27	47590	GASKET, THERMOSTAT COVER	1		2
41	10	53512	SCREW, COVER TO DISTRIBUTI	2	WHEN ORDERING REPLACEME	
41	10	60374	SCREW, COVER TO DISTRIBUTI	2	WHEN ORDERING REPLACEME	
41	10	52447	SCREW, COVER TO DISTRIBUTI	1	WHEN ORDERING REPLACEME	