



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	66963A	1 WIRING HARNESS, EXTERNAL (I	1		
1	84	86674A	2 WIRING HARNESS, EXTERNAL (I	1		
2		26079	PALTE, WIRING HARNESS TO M	1		
3	10	46718	SCREW, WIRING HARNESS PLA	4		
4		36525	WATER TENDERATYRE SBEDEF	1		
5	13	26996	LOCKWASHER, SENDER TERMIN	3		
6	11	68219	NUT, SENDER TERMINALS (10-3	3		
7		34623	OIL PRESSURE SNERDER ASSE	1		
8	89	68258	STARTER SOLENOID	1		
9	13	26993	LOCKWASHER, STARTER SOLEI	2		
10	11	68292	NUT, STARTER SOLENOID TERM	2		
11	13	26996	LOCKWASHER, STARTER SOLEI	2		
12	11	68219	NUT, STARTER SOLENOID TERM	2		
13	10	69028	SCREW, STARTER SOLENOID M	2		
14	13	26992	LOCKWASHER, STARTER SOLEI	2		
15	11	20664	NUT, STARTER SOLENOID SCRE	2		
16	88	78813	CIRCUIT BREAKER	1		
17	11	68219	NUT, CIRCUIT BREAKER STUDS	2		
18	11	24656	NUT, JCIRCUIT BREAKER STUD	2		
19		86924	BRACKET, CIRCUIT BREAKER	1	SERIAL 00000000-05568539	
19		90923	BRACKET, CIRCUIT BREAKER	1	SERIAL 05568540-09999999	
20	10	24637	SCREW, CIRCUIT BREAKER TO B	2		
21	11	46438	NUT, CIRCUIT BREAKER ATTAC	2		
22	10	34353	SCREW, CIRCUIT BREAKER BRA	2		
23	13	37459	LOCKWASHER, CIRCUIT BREAKI	2		
24	10	20055	SCREW, HARNESS LEAD TO ALI	1	- NOT USED WITH MOTOROLA.	
25	13	26996	LOCKWASHER, HARNESS LEAD	1	- NOT USED WITH MOTOROLA.	
26	12	30164	WASHER, HARNESS LEAD SCRE	1	- NOT USED WITH MOTOROLA.	
27		57908	2 SLEEVE, WIRING HARNESS	2		