



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		72623	DISTRIBUTOR ASSEMBLY, COM	1		
2		62426	SCREEN, DISTRIBUTOR HOUSIN	2		
3	43	33664	GEAR, DRIVE-MAIN SHAFT	1		
4		72652	MAIN SAHFT AND WIEGHT PL	1		
5	17	33649	PIN, DRIVE GEAR TO MAIN SH	1		
6	12	58220	WASHER, CAM AND MAIN SHA	1		
7	26	72653	SEAL, HOUSING	1		
8		33653	FELT, BREAKER CAM LUBRICA	1		
-		72654	RETAINER,WICK	1		
10		33665	PLATE, MOUNTING-BREAKER,	1		
11	10	23977	SCREW, MOUNTING PLATE TC	2		
12		33662	CONDENSER	1		
-		48024	BRACKET ,CONDENSER MOUN	1		
-	10	48021	SCREW, CONDENSER BRACKE	1		
13		34235	BREAKER ASSEMBLY,DISTRIB	1		
14	10	33650	SCREW,BREAKER ASSEMBLY	1		
15	12	62425	WASHER,BREAKER ASSEMBL	1		
16	25	33666	GROMMET,MOUNTING PLATE-	1		
17		33658	LEAD PRIMARY	1		
18		58217	ROTOR,DISTRIBUTOR	1		
19	12	36275	WASHER, ROTOR	1		
20		33765	CAP, DISTRIBUTOR	1		
22	10	33660	SCREW,DISTRIBUTOR CAP TO	1		
23	10	33663	SCREW, DISTRIBUTOR CAP TC	1		
24	27	34486	GASKET, DISTRIBUTOR	1		
25	84	69713	1 LEAD ASS'Y, HIGH TENSION-DIS	2		
26	84	69713	2 LEAD ASS'Y, HIGH TENSION-DIS	1		
26	84	69713	3 LEAD ASS'Y, HIGH TENSION-DIS	1		
26	84	69713	4 LEAD ASS'Y, HIGH TENSION-DI	2		
27	85	71006A	1 PROTECTOR, HIGH TENSION L	6		
28	33	59571	SPARK PLUG(AC#R43T)	6		
29		32784	RETIANER,HIGH TENSION LEA	1		
30		32783	RETAINER,HOGH TESNION LEA	1		
31	84	67203	WIRE ASSEMBLY,DISTRIBUTOR	1		
32		32193	COIL ASSEMBLY, IGNITION	1		
33		65970	BRACKET, IGNITION COIL MUNT	1		
34	10	66652	SCREW,MOUNTING BRACKET TI	1		
35	112	30164	WASHER, IGNITION CILI TERM	2		
36	13	26996	LOCKWASHER,IGNITION COIL TE	2		
37	11	68219	NUT, IGNITION COIL TERMINAL	2		
38	10	27165	SCREW,IGNITION COIL TO COIL	1		