



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		56386	WIRING HARNESS, EXTERNAL	1	SERIAL 00000000-03211672	
1	84	61805	WIRING HARNESS, EXTERNAL	1	SERIAL 03211673-03464447	
1	84	63796	WIRING HARNESS, EXTERNAL	1	SERIAL 03464448-3774864	
1	84	66963A 1	WIRING HARNESS, EXTERNAL	1	SERIAL 03774865-09999999	
2		26079	PLATE, WIRING HARNESS TO M	1		
3	10	46718	SCREW, WIRING HARNESS PLA	4		
4		61990	STRAP, NYLON - STATER SOLE	1	SERIAL 00000000-03464447	
5		45108	BATTERY CABLE, POSITIVE	1	SERIAL 00000000-03464447	
5		45107	BATTERY CABLE, NEGATIVE	1	SERIAL 00000000-03464447	
6		36525	WATER TEMPERATURE SENDEL	1		
7	13	26396	LOCKWASHER, SENDER AND SV	3		
8	11	20645	NUT, WASHER AND SWITCH TEF	3		
9	22	32974	ADAPTOR, OIL PRESSURE SNDE	1	SERIAL 00000000-03464447	
10	22	29085	FITTING, OIL PRESSURE SENDE	1		
11		34623	OIL PRESSURE SENDER ASSEEL	1		
12	22	52930	FITTING, TEE - OIL PRESSURE S	1	SERIAL 03464448-04607009	
13	22	64698	NIPPLE, OIL PRESSURE SENDEF	1	SERIAL 03464448-04607009	
14		38559	SWITCH, OIL PRESSURE	1	SERIAL 03464448-04607009	
15		25661	STARTER SOLENOID	1	SERIAL 00000000-04471565	
15A	89	68258	STARTER SOLENOID	1	SERIAL 04471566-09999999	
16	13	26393	LOCKWASHER, STARTER SOLEI	2		
17	11	68292	NUT, STARTER SOLENOID TERM	2		
18	13	26396	LOCKWASHER, STARTER SOLEI	2		
19	11	20645	NUT, STARTER SOLENIOD TERM	2		
20		36177	INSULATOR, STARTER SOLENO	1	SERIAL 00000000-03464447	
21		36176A 2	BRACKET ASSEMBLY, STARTER	1	SERIAL 00000000-03464447	
22		49342	BUMPER, MOUNTING BRACKET	1	SERIAL 00000000-03464447	
23	10	21548	SCREW, MOUNTING BRACKET T	2	SERIAL 00000000-03464447	
24	13	26392	LOCKWASHER, MOUNTING BRA	2	SERIAL 00000000-03464447	
25	10	21625	SCREW, STARTER SOLENIOD M	2		
26	13	26392	LOCKWASHER, STARTER SOLEI	2		
27	11	20664	NUT, STARTER SOLENIOD SCRE	2		
28		59816	CIRCUIT BREAKER	1	SERIAL 03211673-03774864	
29	10	36046	SCREW, WIRING HARNESS LE	2	SERIAL 03211673-03774864	
30		61800	BRACKET, CURCUIT BREAKER	1	SERIAL 03211673-03464447	
28	88	65093	CIRCUIT BREAKER	1	SERIAL 03774865-04884834	
28	88	78813	CIRCUIT BREAKER	1	SERIAL 03774865-09999999	
31	11	20645	NUT, WIRING HARNESS LEADS	2	SERIAL 03774865-09999999	
32	13	26396	LOCKWASHER, WIRING HARNI	2	SERIAL 03774865-09999999	
30		62566	BRACKET, CURCUIT BREAKER	1	NOT AS SHOWN SERIAL 03464	
32	10	47618	SCREW, CIRCUIT BREAKER TO	2	SERIAL 03211673-09999999	