



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	840	3504	CYLINDER BLOCK ASSEMBLY	1	SERIAL 00000000-04160999	
1	840	5947	CYLINDER BLOCK ASSEMBLY	1	SERIAL 04161000-04331786	
1	840	6515	CYLINDER BLOCK ASSEMBLY	1	SERIAL 04609544-09999999	
2	17	35465	PIN, DOWEL-CYLINDER BLOCK	2		
3	19	34270	PLUG, EXPANSION-CYLINDER	3		
3	19	34271	PLUG, EXPANSION-CYLINDER	1		
3	19	37531	PLUG, OIL CHANNEL-CYLINDER	1		
4	19	34488	PLUG, EXPANSION-CAMSHAFT	1	SERIAL 00000000-02963667	
4	19	61747	PLUG, EXPANSION-CAMSHAFT	1	SERIAL 02963668-09999999	
5	19	34487	PLUG, PIPE-CYLINDER BLOCK	1	SERIAL 00000000-03354701	
6	22	36382	PLUG, WATER DRAIN-CYLINDER	1	SERIAL 00000000-03354701	
7	23	35168	BEARING, DISTRIBUTOR PILE	1		
8	734	3458	PISTON AND PISTON PIN ASSE	AR	USE STANDARD PISTON RING	
8	734	3159	PISTON AND PISTON PIN ASSE	AR	SERIAL 00000000-03212085	
8	734	3160	PISTON AND PISTON PIN ASSE	AR	SERIAL 00000000-03212085	
8	734	4858	PISTON AND PISTON PIN ASSE	AR	USE STANDARD PISTON RING	
8	734	4860	PISTON AND PISTON PIN ASSE	AR	SERIAL 03212086-09999999	
9	39	67132	RING, PISTON(STANDARD)	6		
9	39	67133	RING, PISTON (020 O.S.)	AR	SERIAL 00000000-03212085	
9	39	67134	RING, PISTON (030 O.S.)	AR		
10&1			BEARING, CAMSHAFT (SEE M/I	1		
12	23	49959	BEARING UNIT, CRANKSHAFT	6	SERIAL 00000000-04331786	
12	23	49960	BEARING UNIT, CRANKSHAFT	AR	SERIAL 00000000-04331786	
12	23	49961	BEARING UNIT, CRANKSHAFT	AR	SERIAL 00000000-04331786	
12	23	49962	BEARING UNIT, CRANKSHAFT	AR	SERIAL 00000000-04331786	
12	23	49963	BEARING UNTI, CRANKSHAFT	AR	SERIAL 00000000-04331786	
12	23	52256	BEARING UNIT, CRANKSHAFT	6	SERIAL 04331787-09999999	
12	23	52257	BEARING UNIT, CRANKSHAFT	AR	SERIAL 04331787-09999999	
12	23	52258	BEARING UNIT, CRANKSHAFT	AR	SERIAL 04331787-09999999	
12	23	52259	BEARING UNIT, CRANKSHAFT	AR	SERIAL 04331787-09999999	
12	23	52260	BEARING UNIT, CRANKSHAFT	AR	SERIAL 04331787-09999999	
13	23	52261	BEARING UNIT, CRANKSHAFT	AR	SERIAL 00000000-03212085	
13	23	52262	BEARING UNIT, CRANKSHAFT	AR	SERIAL 00000000-03212085	
13	23	52263	BEARING UNIT, CRANKSHAFT	AR	SERIAL 00000000-03212085	
13	23	52264	BEARING UNIT, CRANKSHAFT	AR	SERIAL 00000000-03212085	
13	23	52265	BEARING UNIT, CRANKSHAFT	AR	SERIAL 00000000-03212085	
13	23	34464	BEARING UNIT, CRANKSHAFT	AR	SERIAL 03212086-04331786	
13	23	34490	BEARING UNIT, CRANKSHAFT	AR	SERIAL 03212086-04331786	
13	23	34491	BEARING UNIT, CRANKSHAFT	AR	SERIAL 03212086-04331786	
13	23	34492	BEARING UNIT, CRANKSHAFT	AR	SERIAL 03212086-04331786	
13	23	34493	BEARING UNIT, CRANKSHAFT	AR	SERIAL 03212086-04331786	