



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	45120	STARTER MOTOR ASSEMBLY(DI)	1		
1	50	69864A 1	STARTER MOTOR ASSEMBLY(DI)	1		
1	50	79823A 1	STARTER MOTOR ASSEMBLY(DI)	1		
2	10	34545	BOLT, STARTER MOTOR MOUN	1		
3	10	34544	BOLT, STARTER MOTOR MOUN	1		
4		54671	BRACE, STARTER MOTOR	1		
5	16	52387	STUD, BRACE TO MOTOR AND C	2		
6	12	20103	WASHER, BRACE STUD	2		
7	11	64809	NUT, BRACE STUD	2		
8	11	28517	NUT, SOLENOID SWITCH TERMI	1		
9	13	26395	LOCKWASHER, STARTER MOTOR	1		
10	11	26419	NUT, STARTER MOTOR TERMIN	1		
9	13	26396	LOCKWASHER, STARTER MOTO	1		
10	11	20645	MUT, STARTER MOTOR TERMIN	1		
10	11	32219	NUT, STARTER MOTOR TERMIN	1		
11		56045	ALTERNATOR (DELCO REMY #1	1	SEE NOTE	
11		59755	ALTERNATOR (DELCO REMY #1	1	SEE NOTE	
11		69729	ALTERNATOR (DELCO REMY #1	1	SEE NOTE	
11		78403A 1	ALTERNATOR (MOTOROLA #8MI	1	SEE NOTE	
12		56224	BRACE, ALTERNAODR TO CYLIND	1		
13	16	54177	STUD, ALTERNATOR BRACE TO	1		
14	12	20553	WASHER, ALTERNATOR BRACE	1		
15	11	23161	NUT, ALTERNAODTR BRACE STU	1		
16	10	29198	SCREW, ALTERNATOR BRACE T	1		
17	12	26168	WASHER, ALTERNATOR BRACE	1		
18	10	56057	SCREW, ALTERNATOR TO BRAC	1		
19	23	32727	SPACER, ALTERNATOR SCREW	1	SERIAL 00000000-03464447	
19	23	45353	SPACER, SLTERNATOR SCREW	1	SERIAL 03464448-09999999	
20	11	23161	NUT, ALTERNATOR SCREW	1		
21	13	26391	LOCKWASHER, ALTERNATOR TI	1		
22	11	68531	NUT, ALTERNATOR TERMINAL (1		
23		52817	BRACKET, ALTERNATOR MOUN	1		
24		52818	BRACKET, ALTERNATOR MOUN	1		
25	16	54177	STUD, MOUNTING BRACKET TO	1		
26	16	54176	STUD, MOUNTING BRACKET TO	1		
27	12	20553	WASHER, MOUNTING BRACKET	2		
28	11	23161	NUT, MOUNTING BRACKET STU	2		
29	27	53502	GASKET, ALTERNATOR MOUNTI	1		
30	10	33524	SCREW, ALTERNATOR MOUNTE	1		
31	13	26393	LOCKWASHER, ALTERNATOR M	1		
32	12	26325	WASHER, ALTERNATOR MOUN	1		