



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	84	99510A11	WIRING HARNESS	1			
2		26079	PLATE, WIRING HARNESS - MET	1			
3	10	34696	SCREW, WIRING HARNESS PLA	4			
2		26079A 2	PLATE, WIRING HARNESS - PLA	1			
3	10	15001	SCREW, PLATE - PLASTIC	4			
4		98493A 2	BRACKET, MOUNTING	1			
5	10	49668	SCREW, MOUNTING BRACKET	3			
6	13	26992	LOCKWASHER, MOUNTING BRA	3			
7		97257A 1	WATER TEMPERATURE SENDEI	1			
7		97258A 1	WATER TEMPERATURE SENDEI	1			
7		49734A 1	WATER TEMPERATURE SENDEI	OPT			
8	13	26996	LOCKWASHER, WATER TEMPE	1			
9	11	68219	NUT, WATER TEMPERATURE	1			
10		90806	OIL PRESSURE SENDER ASSEM	1			
10		37293	OIL PRESSURE SENDER ASSEM	OPT			
11	13	26996	LOCKWASHER, OIL PRESSURE	1			
12	11	68219	NUT, OIL PRESSURE SENDER	1			
13	22	46932	ELBOW, OIL PRESSURE SENDE	1			
14	22	42554	NIPPLE, OIL PRESSURE SENDE	1			
15		41170T	BRACKET, MOUNTING	1			
16	10	98260	SCREW, MOUNTING BRACKET (E	1			
17	13	35048	LOCKWASHER, MOUNTING BRA	1			
18	54	92850	CLAMP, BRACKET SCREW	1			
19	16	56826	STUD, MOUNTING BRACKET - OI	1			
20	11	24883	NUT, MOUNTING BRACKET STU	1			
19A	10	37612	SCREW, MOUNTING BRACKET (E	1			
21	12	20572	WASHER, MOUNTING BRACKET	1			
22	13	35048	LOCKWASHER, MOUNTING BRA	1			
23	23	57369	SPACER, MOUNTING BRACKET	1			
24	88	11178	CIRCUIT BREAKER (55 AMP)	1			
25	13	26996	LOCKWASHER, CIRCUIT BREAK	2			
26	11	68219	NUT, CIRCUIT BREAKER TERMIN	2			
27	10	45862	SCREW, CIRCUIT BREAKER (7/8	2			
28	10	45218	SCREW, INSULATOR (3/8")	1			
29	12	56681	WASHER, CIRCUIT BREAKER SC	2			
30	11	46438	NUT, INSULATOR SCREW	3			
31	85	96819T	INSULATOR, CIRCUIT BREAKER	1			
32	89	96054	STARTER SOLENOID	1			
33	10	47910	SCREW, STARTER SOLENOID (5	2			
34	11	20088	NUT, STARTER SOLENOID SCRE	2			
35	12	26992	LOCKWASHER, STARTER SOLE	2			