



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	97499A 2	STARTED MOTOR ASSEMBLY	1		
2	10	48130	SCREW, STARTER MOTOR (4-1/2)	2		
3	12	25909	WASHER, STARTER MOTOR SCREW	2		
4	11	99405	NUT, STARTER MOTOR SCREW	2		
5	11	29031	NUT, STARTER MOTOR TERMINAL	2		
7	11	26419	NUT, STARTER MOTOR TERMINAL	2		
7	11	15874	NUT, BATTERY SWITCH (10M)	1		
7	11	40021	NUT, SOLENOID SWITCH TERMINAL	2		
8		97259A 1	BRACKET, STARTER MOTOR TO CYLINDER	1		
9	10	98261	SCREW, BRACKET TO CYLINDER	2		
10	13	35048	LOCKWASHER, BRACKET SCREW	2		
11		65057A 1	STARTER SOLENOID	1		
12	10	28635	SCREW, SOLENOID TO CYLINDER	2		
13	13	26992	LOCKWASHER, SOLENOID SCREW	2		
14		26901	BUMPER, SOLENOID	1		
15	13	26996	LOCKWASHER, SOLENOID TERMINAL	2		
16	11	68219	NUT, SOLENOID TERMINAL (#10)	2		
17	13	26993	LOCKWASHER, SOLENOID TERMINAL	2		
18	11	22053	NUT, SOLENOID TERMINAL (5/16)	2		
19	84	98269A 9	WIRING HARNESS	1		
20		26079	PLATE -- METAL	1		
21	10	34696	SCREW, PLATE TO BRACKET (3/16)	4		
20		26079A 2	PLATE ASSEMBLY-PLASTIC	1		
21	10	15001	SCREW-PLASTIC	4		
22		90806	SENDING UNIT, OIL PRESSURE	1		
23	13	26996	LOCKWASHER, SENDING UNIT	1		
24	11	68219	NUT, SENDING UNIT TERMINAL	1		
25		99502A 9	VOLTAGE REGULATOR	1		
26	10	98255	SCREW, VOLTAGE REGULATOR	2		
27	13	26992	LOCKWASHER, VOLTAGE REGULATOR	2		
28	10	34354	SCREW, VOLTAGE REGULATOR	1		
29	13	58643	LOCKWASHER, VOLTAGE REGULATOR	1		
30	11	68219	NUT, VOLTAGE REGULATOR TERMINAL	5		
31	84	94227A 2	RESISTANCE WIRE KIT (TO REPAIR)	1		
-	84	11149A 5	ADAPTER KIT	1	(See Note)	