



DISTRIBUTOR AND IGNITION COMPONENTS

				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		90747A 8	DISTRIBUTOR ASSEMBLY	1		
2		13753A 2	CAP, DISTRIBUTOR	1		
3	10	90926	SCREW, DISTRIBUTOR CAP	4		
4	27	98242	GASKET, DISTRIBUTOR CAP	1		
5		13524A 4	ROTOR	1		
6		11351	SENSOR WHEEL	1		
7	10	11252	SCREW, SENSOR WHEEL	3		
8	87	91019A 3	SENSOR ASSEMBLY	1		
9	10	66686	SCREW, SENSOR (1")	1		
9	10	72202	SCREW, SENSOR (1-1/4")	1		
11	43	47619 1	GEAR, DRIVE	1		
12	17	47617	PIN, DRIVE GEAR	1		
13	27	52184	GASKET, DISTRIBUTOR	1		4
14		52185	CLAMP, DISTRIBUTOR TO INTAK	1		
15	10	35169	SCREW, DISTRIBUTOR CLAMP (1		
16	12	30164	WASHER, DISTRIBUTOR TERMINI	2		
17	13	26996	LOCKWASHER, DISTRIBUTOR T	2		
18	11	68219	NUT, DISTRIBUTOR TERMINAL (2		
19	84	42841A51	LEAD ASSEMBLY, DISTRIBUTOR	1		
20	84	43376A11	SPARK PLUG WIRE KIT	1		
21	85	63709A 1	BOOT ASSEMBLY, SPARK PLUI	8		
22	33	59571	SPARK PLUG (NGK-BR6FS)	8		
23		54676	RETAINER, HIGH TENSION LEAC	2		
24		32783	RETAINER, HIGH TENSION LEAC	4		
25		32784	RETAINER, HIGH TENSION LEAC	2		
26	392	7803A 4	COIL, IGNITION	1		
27		65970	BRACKET, IGNITION COIL	1		
28	10	41408	SCREW, BRACKET (1-1/2")	1		
29	12	30164	WASHER, IGNITION COIL TERMINI	2		
30	13	26996	LOCKWASHER, IGNITION COIL T	2		
31	11	68219	NUT, IGNITION COIL TERMINAL	2		
32	10	21077	SCREW, IGNITION COIL	1		
33	13	35048	LOCKWASHER, IGNITION COIL S	1		
34	12	25909	WASHER, IGNITION COIL SCREW	1		