



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42759	DISTRIBUTOR ASSEMBLY	1		
2	392	9085	BEARING KIT	1		
3	392	9086	DISTRIBUTOR CAP	1		
4	392	9087	DRIVE GEAR KIT	1		
5	392	9088	PRIMARY WIRE	1		
6	392	6323	BREAKER PLATE ASSMBLY	1		
7	392	6324	CONDENSER	1		
8	392	6325	BREAKER SET	1		
9	392	9089	ROTOR	1		
10	392	9090	SHAFT AND CAM ASSEMBLY	1		
11	392	9091	SPRING SET	1		
12	27	52184	GASKET, DISTRIBUTOR	1		4
13		52185	CLAMP, DISTRIBUTOR TO INTAK	1		
14	10	35169	SCREW, DISTRIBUTOR CLAMP (1		
15	12	42760	WASHER, DISTRIBUTOR CLAMP	1		
16	84	42841A44	LEAD ASSEMBLY, DISTRIBUTOR	1		
17	84	43376A 7	SPARK PLUG WIRE KIT	1		
18	85	63709A 1	BOOT ASSMBLY, SPARK PLUG	6		
19	33	59571	SPARK PLUG (NGK-BR6FS)	6		
20		54676	RETAINER, HIGH TENSION LEAD	2		
20		32783	RETAINER, HIGH TENSION LEAD	4		
21		32193A 2	COIL, IGNITION	1		
22		65970	BRACKET, IGNITION COIL MOUN	1		
23	10	41408	SCREW, MOUNTING BRACKET T	1		
24	12	30164	WASHER, IGNITION COIL TERMI	2		
25	13	26996	LOCKWASHER, IGMNITION COIL	2		
26	11	68219	NUT, IGNITION COIL TERMINAL	2		
27	10	21077	SCREW, IGNITION COIL	1		
28	13	35048	LOCKWASHER, IGNITION COIL S	1		
29	12	25909	WASHER, IGNITION COIL SCREW	1		