


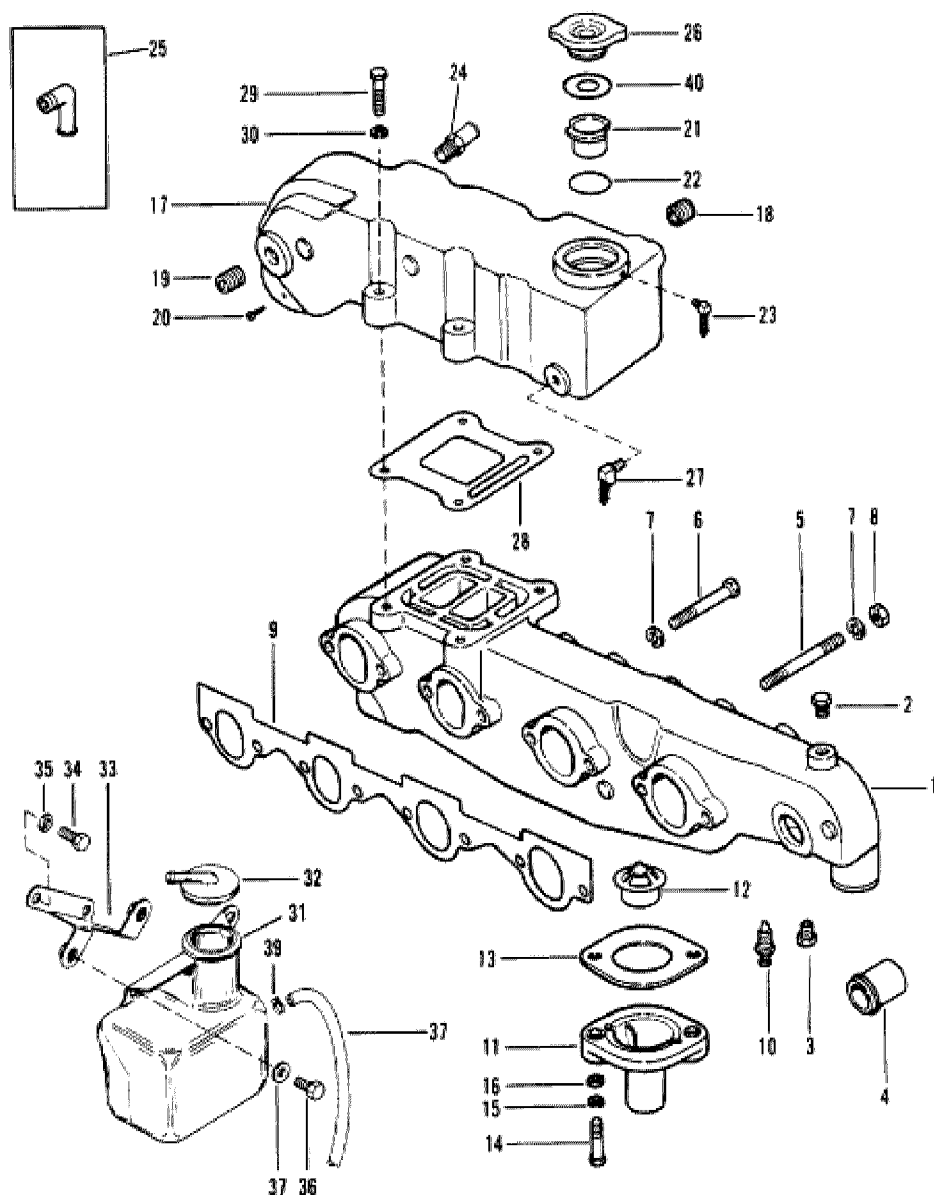

Parts List					
Ref	Class	Part	Description	Qty	
1		99908A 3	EXHAUST MANIFOLD ASSEMBLY	1	
2	22	32802	PIPE PLUG (1/8-27 NPT)	1	
3	22	32803	PIPE PLUG, DRAIN	1	
4	23	72119	WATER SLEEVE	1	
5	16	78438	STUD, EXHAUST MANIFOLD TO HEAD	3	
6	10	89679	SCREW, EXHAUST MANIFOLD TO HEAD (6")	4	
7	13	35048	LOCKWASHER, EXHAUST MANIFOLD	7	
8	11	24883	NUT, EXHAUST MANIFOLD STUD	3	
9	27	68715	GASKET, EXHAUST MANIFOLD TO HEAD	1	
10		15995	SENDER, WATER TEMPERATURE	1	
11		89659A 3	THERMOSTAT HOUSING	1	
12		99155A 1	THERMOSTAT	1	
13	27	89656	GASKET, THERMOSTAT HOUSING TO EXHAUST MANIFOLD	1	
14	10	73657	SCREW, THERMOSTAT HOUSING	2	
15	13	39107	LOCKWASHER, THERMOSTAT HOUSING SCREW	2	
16	12	26825	WASHER, THERMOSTAT HOUSING SCREW	2	
17		90880A 2	EXHAUST ELBOW AND RESERVOIR ASSEMBLY	1	
18	22	32802	PIPE PLUG (1/8-27 NPT)	1	
19	22	33198A 1	CORE PLUG (3/4-14)	2	
20	10	28642	SCREW, DRIVE	4	
21	22	13234A 1	BASE, FILLER HOLE	1	
22	25	45257	"O" RING, FILLER BASE	1	
23	22	99498	OVERFLOW ELBOW (THREADED)	1	
24	22	45084	CONNECTOR, HOSE (w/POWER STEERING)	1	
25	22	36305	ELBOW, HOSE (w/O POWER STEERING)	1	
26	36	55143	CAP, FILLER	1	
27	22	76170	FITTING, RESERVIOR BY-PASS	1	
28	27	97542	GASKET, ELBOW AND RESERVIOR TO MANIFOLD	1	
29	10	37269	SCREW, ELBOW AND RESERVIOR TO MANIFOLD	4	
30	13	32993	LOCKWASHER, ELBOW AND RESERVIOR SCREW	4	
31		91987A 1	BOTTLE ASSEMBLY, COOLANT RECOVERY	1	
32	36	91989A 1	CAP ASSEMBLY	1	
33		97864A 2	BRACKET ASSEMBLY, BOTTLE	1	
34	10	47461	SCREW, BOTTLE BRACKET	2	
35	13	37272	LOCKWASHER, BOTTLE BRACKET SCREW	2	
36	10	98261	SCREW, BOTTLE TO BRACKET	2	
37	12	25909	WASHER, BOTTLE SCREW	2	
38	32	77457 2	HOSE, COOLANT RECOVERY BOTTLE	1	