


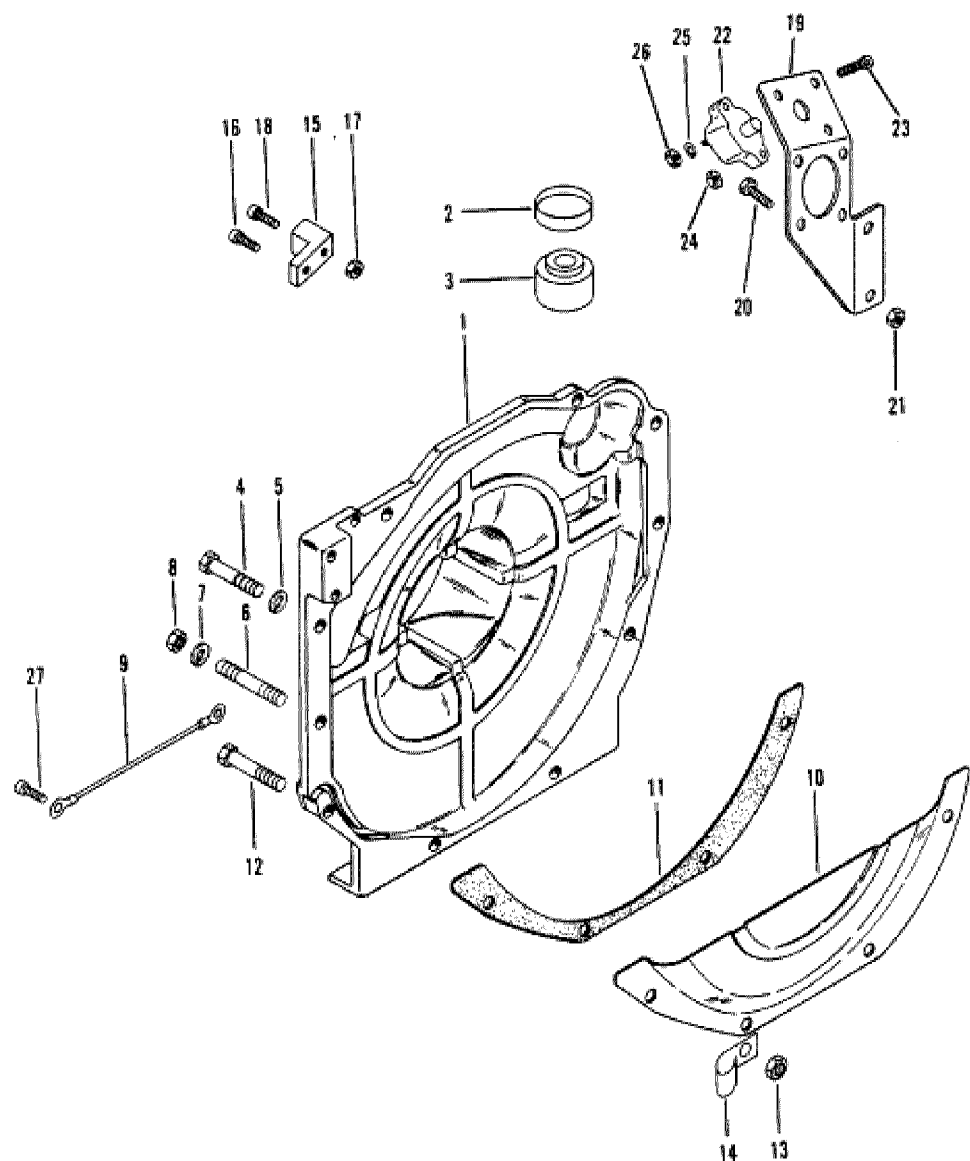

Parts List

Ref	Class	Part	Description	Qty	
1		94985A 2	FLYWHEEL HOUSING ASSEMBLY	1	
2	23	99322	SPACER, RUBBER MOUNT	2	
3		12619	MOUNT, RUBBER	2	
4	10	37612	SCREW, FLYWHEEL HOUSING (1-1/4")	3	
5	13	35048	LOCKWASHER, FLYWHEEL HOUSING SCREW	4	
6	16	64066	STUD, FLYWHEEL HOUSING	1	
7	13	35048	LOCKWASHER, FLYWHEEL HOUSING STUD	1	
8	11	32219	NUT, FLYWHEEL HOUSING STUD	1	
9	84	62826A 6	WIRE, FLYWHEEL HOUSING STUD	1	
10		95026A 2	COVER, FLYWHEEL HOUSING	1	
11	27	94976	GASKET, FLYWHEEL HOUSING COVER	1	
12	10	26065	SCREW, COVER TO FLYWHEEL HOUSING AND CLAM (1")	4	
13	11	29250	NUT, COVER TO FLYWHEEL HOUSING AND CLAMP SCREW	4	
14	54	61001	CLAMP, SHIFT CABLE ATTACHING	1	
15		45915	TERMINAL BLOCK-OLD DESIGN	1	
16	10	20189	SCREW, TERMINAL BLOCK-OLD DESIGN	1	
17	11	27164	NUT, TERMINAL BLOCK SCREW-OLD DESIGN	1	
18	10	62568	SCREW, LEAD ATTACHING-OLD DESIGN	1	
19		43182	BRACKET, CIRCUIT BREAKER	1	
20	10	78038	SCREW, CIRCUIT BREAKER BRACKET TO FLYWHEEL HO	2	
21	11	72008	NUT, CIRCUIT BREAKER BRACKET SCREW	2	
22	88	11178	CIRCUIT BREAKER (50 AMP)	1	
23	10	45862	SCREW, CIRCUIT BREAKER TO BRACKET (7/8")	2	
24	11	46438	NUT, CIRCUIT BREAKER SCREW	2	
25	13	26996	LOCKWASHER, CIRCUIT BREAKER TERMINAL	2	
26	11	68219	NUT, CIRCUIT BREAKER TERMINAL	2	
27	10	85486	SCREW, GROUND WIRE TO TRANSOM PLATE	1	