


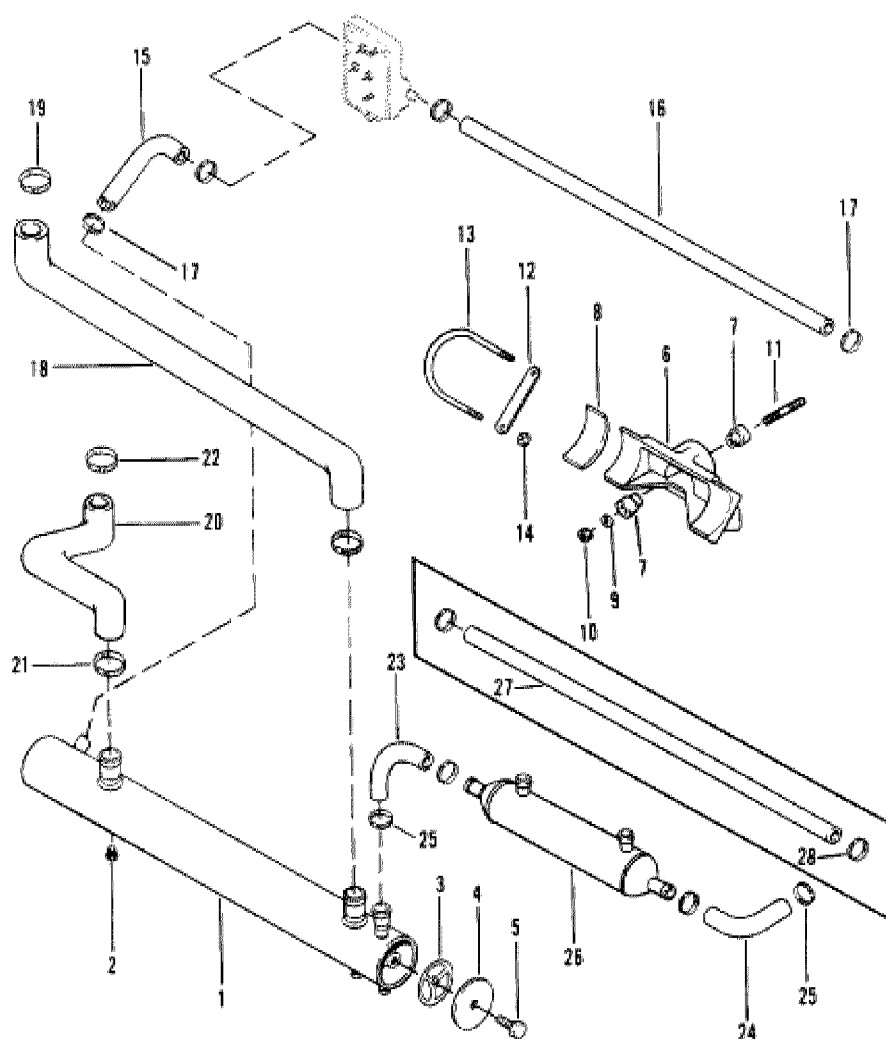

Parts List

Ref	Class	Part	Description	Qty	
1		99438A 1	HEAT EXCHANGER	1	
2	22	32802	PIPE PLUG, HEAD EXCHANGER	2	
3	27	99960	GASKET, END CAP	2	
4		99961	PLATE, END CAP	2	
5	10	99962	SCREW, END CAP - HEAD EXCHANGER	2	
6		98618A 1	BRAKET ASSEMBLY, HEAT EXCHANGER	1	
7		41024	MOUNT, VIBRATION	6	
8		77223	PAD, MOUNTING BRACKET	2	
9	12	31263	WASHER, MOUNT STUD	3	
10	11	34933	NUT, MOUNT STUD	3	
11	16	41025	STUD, BRACKET	3	
12		98620	STRAP, BRACKET TO HEAT EXCHANGER	2	
13	10	98619A 1	"U" BOLT, HEAT EXCHANGER	2	
14	11	26484	NUT, "U" BOLT	4	
15	32	99520	HOSE, HEAT EXCHANGER TO REGULATOR	1	
16	32	42850 64	HOSE, WATER INLET	1	
17	54	43510	CLAMP, HOSE ATTACHING	4	
18	32	77245	HOSE, THERMOSTAT HOUSING TO HEAD EXCHANGER	1	
19	54	32780	CLAMP, HOSE ATTACHING	2	
20	32	99729	HOSE, EXHAUST MANIFOLD TO HEAT EXCHANGER	1	
21	54	32780	CLAMP, HOSE TO HEAD EXCHANGER	1	
22	54	32781	CLAMP, HOSE TO EXHAUST MANIFOLD	1	
23	32	33220 70	HOSE, COOLER TO HEAD EXCHANGER-W/POWER STEE	1	
24	32	95850	HOSE, COOLER TO EXHAUST ELBOW-W/POWER STEER	1	
25	54	32780	CLAMP, HOSE ATTACHING -W/POWER STEERING	4	
26		99356A 1	OIL COOLER-W/POWER STEERING	1	
27	32	33220 70	HOSE, HEAT EXCHANGER TO EXHAUST ELBOW-W/O PO	1	
28	54	32780	CLAMP, HOSE ATTACHING-W/O POWER STEERING	2	