



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		34110	DISTRIBUTOR ASSEMBLY, COM	1,1,1		
2		33708	CAP, DISTRIBUTOR	1,1,1		
3		33654	BUTTON, CARBON - DISTRI	1,1,1		
4		33707	ROTOR, DISTRIBUTOR	1,1,1		
5	10	33692	SCREW, ROTOR TO BREAK	2,2,2		
6	13	26996	LOCKWASHER, ROTOR TO B	2,2,2		
7	24	33720	SPRING, BREAKER CAM ADV	2,2,2		
9		34119	SHAFT, MAIN - BREAKER CAM	1,1,1		
10	23	34116	SLEEVE, MAIN SHAFT	1,1,1		
11		34117	CAM, BREAKER - ADVANCE	1,1,1		
12		33706	CONDENSER	1,1,1		
13		33697	BRACKET, CONDENSER MOL	1,1,1		
14	10	33722	SCREW, CONDENSER AND B	1,1,1		
15		33653	FELT WICK, CAM WIPER - MC	1,1,1		
16		33713	RETAINER, FELT WICK - MOL	1,1,1		
17		33714	PLATE, MOUNTING - BREAK	1,1,1		
18		33705	LEAD, GROUND - MOUNTIN	1,1,1		
19	24	33710	SPRING, RETAINING - MOUN	1,1,1		
20		33700	BREAKER ASSEMBLY	1,1,1		
21	10	33718	BREAKER ASSEMBLY TO MOUN	2,2,2		
22	12	34112	WASHER, FELT - MOUNTING	1,1,1		
23		34120	HOUSING, PRIMARY - DISTRI	1,1,1		
24	26	34111	SEAL, DISTRIBUTOR HOUS	1,1,1		
25	25	33709	GROMMETT, DISTRIBUTOR	1,1,1		
26	43	34114	GEAR AND CROSS SHAFT, DISB	1,1,1		
27	12	34111	WASHER, GEAR AND CROSS SH	1,1,1		
28		34113	COUPLING, CROSS SHAFT	1,1,1		
29		33695	VACUUM CONTROL, DISTRI	1,1,1		
30	10	33648	SCREW, VACUUM CONTROL	2,2,2		
31	13	33691	LOCKWASHER, VACUUM COI	2,2,2		
32		33712	LEAD WIRE, PRIMARY - DIST	1,1,1		
33	12	33696	WASHER, MAIN SHAFT	1,1,1		
34	43	34118	GEAR, DRIVE - MAIN SHAFT	1,1,1		
35	17	34109	PIN, DRIVE GEAR TO MAIN S	1,1,1		
36		30498	CAP, CROSS SHAFT COUPLING	1,1,1		
37	27	34891	GASKET, DISTRIBUTOR	1,1,1		
38		35369	CLAMP UNIT, DISTRIBUTOR	1,1,1		
39		34549	RETAINER, DISTRIBUTOR CL	1,1,1		
40	10	35368	SCREW, DISTRIBUTOR TO INTA	1,1,1		
41		33209A 1	LEAD ASSEMBLY, DISTRIBUTOR	1,		
41		34099A 1	LEAD ASSEMBLY, DISTRIBUTOR	1,1		