



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	50	12177A 2	STARTER MOTOR ASSEMBLY	1	
1		75666	HOUSING, DRIVE END	1	4
1		13754	HOUSING, DRIVE END	1	2
2	23	33369	BUSHING, DRIVE END HOUS	1	
3		33292	COLLAR, THRUST	1	
4	53	33290	RING, RETAINING - PINION ST	1	
5		33291	COLLAR, PINION STOP	1	
6		79205	DRIVE ASSEMBLY, CLUTCH	1	
7		79396	PLATE, BEARING	1	
8	23	71694	BUSHING, BEARING PLATE	1	
9	12	68614	WASHER, BEARING PLATE	1	
10		N.S.S.	SCREW, BEARING PLATE (DEL	2	4
11		71693	ARMATURE	1	4
12		N.S.S.	SHOE, POLE - FIELD COIL (DEL	4	4
10		N.S.S.	SCREW, BEARING PLATE (DEL	2	2
11		75665	ARMATURE	1	2
12		N.S.S.	SHOE, POLE - FIELD COIL (DEL	4	2
13		N.S.S.	SCREW, POLE SHOE TO FIELD	4	
14	25	79208	GROMMET, FIELD COIL - FIELD	1	
15		79212	FIELD COIL ASSEMBLY	1	
15		75664	FIELD COIL ASSEMBLY	1	2
16	12	33258	WASHER, LEATHER - COMMUT	1	
17		79211	FRAME, COMMUTATOR END -I	1	
18		N.S.S.	BOLT, THRU (DELCO-REMY #1	1	
18		N.S.S.	BOLT, THRU (DELCO-REMY #1	1	
19		33284	HOLDER, INSULATED	2	
20		33283	HOLDER, FIELD FRAME BRUSH	2	
21		33270	BRUSH, FIELD FRAME	4	
22		N.S.S.	SCREW, BRUSH LEAD (DELCO	2	
22		N.S.S.	SCREW, BRUSH LEAD (DELCO	2	
23		33294	SUPPORT PACKAGE, GROUND	2	
24	24	33285	SPRING, FIELD FRAME BRUSH	4	
25		N.S.S.	PIN, DOWEL - FIELD FRAME (D	1	
26		71698	LEVER, SHIFT	1	
27		N.S.S.	STUD, SHIFT LEVER (DELCO R	1	
28		N.S.S.	RETAINING RING (DELCO REM	1	
29		33317	PLUNGER, SHIFT LEVER	1	
30		N.S.S.	PIN, PLUNGER TO SHIFT LEVE	1	
31		N.S.S.	SPRING, PLUNGER RETURN (C	1	
32		N.S.S.	SCREW, SOLENOID SWITCH (C	2	
32		12027	SOLENOID SWITCH ASSEMBLY	1	