

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		52754	HOUSING, FLYWHEEL	1	SERIAL 00000000-02494935	
1		53652A	HOUSING ASSEMBLY, FLYWHEEL	1	SERIAL 02494936-09999999	
2		35852	MOUNT, RUBBER-FLYWHEEL	2	SERIAL 02494936-09999999	
3		35864	COVER PLATE, FLYWHEEL HOUSING	1		
4	10	25299	SCREW, COVER PLATE TO FLYWHEEL	6		
5	13	39107	LOCKWASHER, COVER PLATE SCREW	6		
6	10	48115	SCREW, HOUSING TO BLOCK (3)	2	SERIAL 00000000-02494935	
6	10	53734	SCREW, HOUSING TO BLOCK (3)	2	SERIAL 02494936-09999999	
7	10	48424	SCREW, HOUSING TO BLOCK (1)	3		
8	10	53044	SCREW, HOUSING TO BLOCK (1)	1		
9	13	37459	LOCKWASHER, HOUSING SCREW	6		
10	11	28517	NUT, HOUSING SCREW	1		
11	54	24871	CLAMP, WIRING HARNESS TO HOUSING	1	SERIAL 00000000-02494935	
11	54	46997	CLAMP, WIRING HARNESS TO HOUSING	1	SERIAL 02494936-09999999	
12	10	22245	SCREW, WIRING HARNESS CLAMP	1		
13	13	26996	LOCKWASHER, WIRING HARNESS CLAMP	1		
14		22789	"D" WASHER, WIRING HARNESS CLAMP	1		
15		39974	CONNECTOR, HARNESS LEADS	2		
16	10	37892	SCREW, CONNECTOR TO FLYWHEEL	2		
17	54	34764	EYE, LIFTING-CYLINDER BLOCK	2		
18	10	27165	SCREW, LIFTING EYE TO CYLINDER	1		
19	13	37459	WASHER, LIFTING EYE SCREW	1		
20	38	31042	SERIAL PLATE	1		
21	10	20314	SCREW, DRIVE SERIAL PLATE	2		

