



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	45120	STARTER MOTOR	1	SEE NOTE	
2	10	34545	BOLT, STARTER MOTOR MOUN	1		
3	10	34544	BOLT, STARTER MOTOR MOUN	1		
4	11	26419	NUT, SOLENOID SWITCH TERMI	1		
5	13	26995	LOCKWASHER, STARTER MOTO	1		
6	11	28517	NUT, SOLENOID SWITCH TERMI	1		
7		52250	BRACE, STARTER MOTOR	1		
8	16	52387	STUD, STARTER MOTOR BRACE	2		
9	12	20103	WASHER, STARTER MOTOR BR.	2		
10	11	35814	NUT, STARTER MOTOR BRACE	2		
11		37615A	ALTERNATOR ASSEMBLY	1	SEE NOTE	
12		39995	BRACE, ALTERNATOR TO CYLIN	1		
13	10	38837	SCREW, ALTERNATOR BRACE T	1		
14	13	26993	LOCKWASHER, ALTERNATOR BI	1		
15	10	29198	SCREW, ALTERNATOR BRACE T	1		
16	12	26168	WASHER, ALTERNATOR BRACE	1		
17	10	32775	SCREW, ALTERNATOR TO BRAC	1		
18	12	20553	WASHER, ALTERNATOR SCREW	AR		
19	23	33186	SPACER, ALTERNATOR SCREW	1		
20	11	23161	NUT, ALTERNATOR SCREW	1		
21	12	20192	WASHER, ALTERNATOR GROUN	1		
22		39998	BRACKET, ALTERNATOR MOUN	1		
23	10	26632	SCREW, ALTERNATOR BRACKE	2		
24	13	37459	LOCKWASHER, ALTERNATOR M	2		