



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	735	9430	PISTON AND PISTON PIN ASSEM	AR		
1	735	9431	PISTON AND PISTON PIN ASSEM	AR		
2	39	65153	RING, PISTON (STANDARD)	6		
2	39	67126	RING, PISTON (.030 O.S.)	AR		
3	23	85694	BEARING UNIT, CRANKSHAFT (S	3		
3	23	85695	BEARING UNIT, CRANKSHAFT M	AR		
3	23	85696	BEARING UNIT, CRANKSHAFT M	AR		
3	23	85697	BEARING UNIT, CRANKSHAFT M	AR		
4	23	85698	BEARING UNIT, CRANKSHAFT M	1		
4	23	85699	BEARING UNIT, CRANKSHAFT M	AR		
4	23	85700	BEARING UNIT, CRANKSHAFT M	AR		
4		N. S. S.	BEARING UNIT, REAR (.020 U.S.)	AR		
5	17	35312	PIN, DOWEL - REAR BEARING C	2		
6	26	58203	OIL SEAL, REAR (2-PIECE)	2		4,9
7	222	9434	FLYWHEEL	1		9
7	222	9518	FLYWHEEL	1		8
8	10	49845	SCREW, FLYWHEEL TO CRANKS	6		
9	13	39131	LOCKWASHER, FLYWHEEL SCR	6		
10		76850A 2	COUPLING ASSEMBLY EARLY M	1		
11	16	98532A 1	STUD, COUPLER TO FLYWHEEL	6		
12	12	35935	WASHER, COUPLER TO FLYWHE	6		
13	11	98533	NUT, COUPLER STUDS TO FLYW	6		
14		12632A 4	COUPLING ASSEMBLY LATER M	1		
15		26901	RUBBER BUMPER LATER MO	3		
16	10	14883	SCREW, COUPLING LATER MO	3		
17	12	13510	WASHER, COUPLING SCREW	3		
18	614	9429	CONNECTING ROD ASSEMBLY	6		
19	10	11969	BOLT, CONNECTING ROD CAP	12		
20	11	37493	NUT, CONNECTING ROD CAP E	6		
21	23	11992	BEARING UNIT (PAIR), CONNECT	6		
21	23	11993	BEARING UNIT (PAIR), CONNECT	AR		
22	429	9428	CRANKSHAFT	1		9
22	429	9517	CRANKSHAFT	1*		8
23	28	34466	KEY, CRANKSHAFT PULLEY ANC	2		