



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	99510A11	WIRING HARNESS	1		
2		26079	PLATE, WIRING HARNESS - MET	1		
3	10	34696	SCREW, WIRING HARNESS PLA	4		
2		26079A 2	PLATE, WIRING HARNESS - PLA	1		
3	10	15001	SCREW, PLATE - PLASTIC	4		
4		98493A 2	BRACKET, MOUNTING	1		
5	10	49668	SCREW, MOUNTING BRACKET	3		
6	13	26992	LOCKWASHER, MOUNTING BRA	3		
7		97257A 1	WATER TEMPERATURE SENDEI	1		
7		97258A 1	WATER TEMPERATURE SENDEI	1		
7		49734A 1	WATER TEMPERATURE SENDEI	OPT		
8	13	26996	LOCKWASHER, WATER TEMPE	1		
9	11	68219	NUT, WATER TEMPERATURE	1		
10		90806	OIL PRESSURE SENDER ASSEM	1		
10		37293	OIL PRESSURE SENDER ASSEM	OPT		
11	13	26996	LOCKWASHER, OIL PRESSURE	1		
12	11	68219	NUT, OIL PRESSURE SENDER	1		
13	22	46932	ELBOW, OIL PRESSURE SENDEI	1		
14	22	42554	NIPPLE, OIL PRESSURE SENDEI	1		
15		41170T	BRACKET, MOUNTING	1		
16	10	98260	SCREW, MOUNTING BRACKET (E	1		
17	13	35048	LOCKWASHER, MOUNTING BRA	1		
18	54	92850	CLAMP, BRACKET SCREW	1		
19	16	56826	STUD, MOUNTING BRACKET - OI	1		
20	11	24883	NUT, MOUNTING BRACKET STU	1		
19A	10	37612	SCREW, MOUNTING BRACKET (E	1		
21	12	20572	WASHER, MOUNTING BRACKET	1		
22	13	35048	LOCKWASHER, MOUNTING BRA	1		
23	23	57369	SPACER, MOUNTING BRACKET (1		
24	88	11178	CIRCUIT BREAKER (55 AMP)	1		
25	13	26996	LOCKWASHER, CIRCUIT BREAKE	2		
26	11	68219	NUT, CIRCUIT BREAKER TERMIN	2		
27	10	45862	SCREW, CIRCUIT BREAKER (7/8	2		
28	10	45218	SCREW, INSULATOR (3/8")	1		
29	12	56681	WASHER, CIRCUIT BREAKER SC	2		
30	11	46438	NUT, INSULATOR SCREW	3		
31	85	96819T	INSULATOR, CIRCUIT BREAKER	1		
32	89	96054	STARTER SOLENOID	1		
33	10	47910	SCREW, STARTER SOLENOID (5	2		
34	11	20088	NUT, STARTER SOLENOID SCRE	2		
35	13	26992	LOCKWASHER, STARTER SOLE	2		