



**ELECTRIC SHIFT**

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		54517A 3	FLYWHEEL HOUSING ASSEMBLY	1		
2	30	54251	BALL BEARING, FLYWHEEL HC	1		
3		35852	MOUNT, RUBBER - FLYWHEEL	2		
4	30	32537	BALL BEARING, FLYWHEEL HC	1		
5	53	54481	SNAP RING, BALL BEARING RE	1		
6	25	54067	SEAL, TRANSOM TO GIMBAL HO	1		
7	10	37260	SCREW, FLYWHEEL HOUSING A	1		
7	10	47462	SCREW, FLYWHEEL HOUSING A	4		
7	10	47461	SCREW, FLYWHEEL HOUSING A	1		
7	10	54847	SCREW, FLYWHEEL HOUSING A	1		
7	10	25299	SCREW, FLYWHEEL HOUSING A	2		
8	13	32993	LOCKWASHER, FLYWHEEL HOU	5		
8	13	30381	LOCKWASHER, FLYWHEEL HOU	1		
8	13	39107	LOCKWASHER, FLYWHEEL HOU	2		
9		57598A 1	BRACKET ASSEMBLY, CABLE SU	1		
9		60403A 2	BRACKET ASSEMBLY, CABLE SU	1		
10	25	56291	GROMMET, SHIFT CABLE SUPP	1		
11	10	21548	SCREW, SUPPORT BRACKET TC	2		
12	13	21272	LOCKWASHER, SHIFT CABLE SU	2		
13	38	31042	SERIAL PLATE	1		
14	10	20314	SCREW, SERIAL PLATE TO FLY	2		
15		54451	RETAINING, BEARING - FLYWHE	1		
16	10	35386	SCREW, BEARING RETAINER TC	4		
17	13	39107	LOCKWASHER, BEARING RETAI	4		
18	52	55086	PRESSURE PLATE, CLUTCH	1		
19	52	59111	CLUTCH PLATE, DRIVEN	1		
20	10	56889	SCREW, PRESSURE PLATE ATT.	6		
21	13	39107	LOCKWASHER, PRESSURE PLA	6		
22		56878	PLATE, COVER - REAR	1		
23	27	56152	SEAL, REAR COVER PLATE	1		
24	30	55071	BEARING, CLUTCH RELEASE	1		
25		58387	FORK, CLUTCH	1		
26	10	54475	SCREW, ARM TO CLUTCH FORK	1		
27	31	54910	BEARING, CAM FOLLOWER - CLL	1		
28	11	20664	NUT, CLUTCH FORK ARM SCRE	1		
29	10	52409	SCREW, CLUTCH FORK TO FLY	1		
30	11	20509	NUT, CLUTCH FORK SCREW	1		
31		54680	GUIDE, CLUTCH FORK DETENT	1		
32	24	54489	SPRING, DETENT - CLUTCH FOR	1		
33		58386	ARM, CLUTCH FORK	1		
34	10	58278	SCREW, SET, CLUTCH FORK AS	1		