



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1571	4113A	DRIVE SHAFT HOUSING ASSEM	1		
2	15	54008A	SHIM ASSEMBLY, REAR PINION	AR		
3	43	58854A	GEAR ASSEMBLY, PINION - UNIV	1		
4	31	54038A	TAPERED ROLLING BEARING AS	1		
5	23	53999	SPACER, TAPERED ROLLER BI	1		
6	12	54049	WASHER, SPLINED - REAR PINIC	1		
7	11	54046	NUT, REAR UNIVERSAL GEAR	1		
8	12	54006	WASHER, UNIVERSAL JOINT	1		
9	11	55819	NUT, UNIVERSAL JOINT	1		
10	15	54008A	SHIM ASSEMBLY, REAR COVER	AR		
11	25	39695	"O" RING, REAR COVER	1		
12		57765	COVER, REAR	1		
13	10	31985	SCREW, REAR COVER TO DRIVE	4		
14	15	54009A	SHIM ASSEMBLY, TAPERED ROL	AR		
15	31	55466A	TAPERED ROLLER BEARING AS:	1		
16	43	54399	GEAR, DRIVE - DRIVE SHAFT	1		
17	12	54414	WASHER, DRIVE GEAR	5		
18	11	55820	NUT, DRIVE GEAR TO DRIVE SH	1		
19	25	54031	"O" RING, TOP COVER	1		
20		54164	COVER, TOP	1		
21	10	31985	SCREW, TOP COVER TO DRIVE :	4		
22	52	58312	RATCHET, SLIDING CLUTCH	1		
23		54165	SHIFT FORK, SLIDING CLUTCH	1		
24		54161	SHOE, SHIFT FORK	2		
25		58317	LEVER, SHIFT FORK	1		
26		58315A	LINK ROD ASSEMBLY, CRANKSH	1		
27	11	24652	NUT, LINK ROD ATTACHING	1		
28		54348	SHIFT SHAFT, SHIFT FORK	1		
29	23	54349	BUSHING, THREADED - SHIFT SI	2		
30	12	54351	WASHER, FIBER - THREADED BI	2		
31	12	20086	WASHER, THREADED BUSHING	2		
32	10	34298	SCREW, ADJUSTING - SHIFT FO	1		
33	12	54017	WASHER, ADJUSTING SCREW	2		
34	23	54015	SPACER, ADJUSTING SCREW	2		
35	24	58394	SPRING, ADJUSTING SCREW	2		
36	12	39143	WASHER, ADJUSTING SCREW	2		
37	11	20664	NUT, ADJUSTING SCREW	1		