



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1571	4113A 1	DRIVE SHAFT HOUSING ASSEM	1		
2	10	21934	SCREW, SET - DRIVE SHAFT H	1		
3	16	54674	STUD, DRIVE SHAFT HOUSING	6		
4	11	34933	NUT, DRIVE SHAFT HOUSING S	6		
5	19	47579	PLUG, TRIM TAB HOLE - DRIVE	1		
6	10	28634	SCREW, VENT - DRIVE SHAFT H	1		
7	12	20260	WASHER, SEALING - VENT SCRE	1		
8	37	56081A 1	DECAL SET, DRIVE SHAFT HOUS	1		
9	15	57423A 1	SHIM ASSEMBLY, FRONT PINION	AR		
10	43	57501A 1	GEAR ASSEMBLY, PINION -UNIV	1		
11	31	57410	ROLLER BEARING, FRONT PIN	1		
12	25	57413	"O" RING, DRIVE SHAFT HOUSI	1		
13	31	57411A 2	TAPERED ROLLER BEARING AS:	1		
14	15	57423A 1	SHIM ASSEMBLY, FRONT COVER	AR		
15	12	57502	WASHER, SPLINED - FRONT PIN	1		
16	11	57503	NUT, FRONT PINION GEAR	1		
17		57497A 1	COVER ASSEMBLY, FRONT	1		
18	26	56768	OIL SEAL, FRONT COVER	1		
19	25	32068	"O" RING, FRONT COVER (4 1/	1		
20	25	45711	"O" RING, FRONT COVER (5/8"	2		
21	25	57414	"O" RING, FRONT COVER (1 1/	1		
22	23	55237	BUSHING, CRANKSHIFT GEAR	1		
23	23	55238	BUSHING, CRANKSHIFT PINION	1		
24	10	30206	SCREW, FRONT COVER TO DRIV	4		
25		57498A 1	UNIVERSAL JOINT ASSEMBLY, PI	1		
26		57498	YOKE, UNERSAL JOINT (REAR)	1		
27		58749	CROSS AND BEARING ASSEME	2		
28		39383	SOCKET, CENTER - UNIVERSA	1		
29		54086	YOKE, UNIVERSAL JOINT (COU	1		
30		54168	GUIDE, CHECK VALVE	1		
31	27	54020	GASKET, CHECK VALVE GUIDE	1		
32	20	48219	CHECK VALVE - OIL RELEASE	1		
33	25	48452	QUAD RING, OIL RELEASE CHEC	1		
34	24	48442	SPRING, TENSION - OIL RELEAS	1		
35	10	22523	SCREW, CHECK VALVE GUIDE T	3		
36		57505A 1	COVER ASSEMBLY, CRANKSHIF	1		
37	25	47632	"O" RING, CRANKSHIFT COVER	1		
38	10	57400	SCREW, SET - CRANKSHIFT GE	1		
39	27	57506	GASKET, CRANKSHIFT COVER	1		
40	10	21625	SCREW, CRANKSHIFT COVER TI	3		
41	12	21372	LOCKWASHER, CRANKSHIFT CO	2		