



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		53934A 3	BELL HOUSING ASSEMBLY	1	HYDRAULIC SHIFT	
2	22	32803	PLUG, PIPE-BELL HOUSING	1	HYDRAULIC SHIFT	
3	26	48443	OIL SEAL, BELL HOUSING	1	HYDRAULIC SHIFT	
4	10	25612	SCREW, DRIVE-EXHAUST FLAT	4	HYDRAULIC SHIFT	
5	16	54011	STUD, BELL HOUSING TO DRIV	6	HYDRAULIC SHIFT	
1		53934A 2	BELL HOUSING ASSEMBLY	1	ELECTRIC SHIFT	
3	26	48443	OIL SEAL, BELL HOUSING	1	ELECTRIC SHIFT	
4	10	25612	SCREW, DRIVE-EXHAUST FLAT	4	ELECTRIC SHIFT	
5	16	57418	STUD, BELL HOUSING TO DRIV	6	ELECTRIC SHIFT	
6	12	54012	WASHER, BELL HOUSING STUD	6		
7	11	35000	NUT, BE LL HOUSING STUD	6		
8	27	54014	GASKET, BELL HOUSING TO DRI	1		
9	24	48442	SPRING, TENSION-OIL RELEASE	1		
10	25	48452	QUAD RING, OIL RELEASE CHEC	1		
11	20	48219	CHECK VALVE, OIL RELEASE	1		
12		54170A 1	COVER ASSEMBLY, CHECK VALV	1		
13	22	34982	CONNECTOR, CHECK VALVE G	1		
14	27	54021	GASKET, CHECK VALVE GUIDE C	1		
15	10	36137	SCREW, CHECK VALVE COVER T	3		
16	13	26992	LOCKWASHER, CHECK VALVE G	3		
17		57292	JUMPER CABLE, GIMBAL HOUSI	1		
18	10	47225	SCREW, JUMPER CABLE	1		
19	32	34423A 1	HOSE, OIL-BELL HOUSING TO GI	1		
20	54	54428	CLAMP, OIL HOSE TO BELL HOU	2		
21		36223A 1	BELLOWS ASSEMBLY, UNIVERS	1		
22	54	31765	CLAMP,BELLOWS TO GIMBAL HC	2		
23		54406	BELLOWS, EXHAUST	1		
24	54	38889	CLAMP, EXHAUST BELLOWS AT	2		
25		57842A 2	SHAFT ASSEMBLY, CRANKSHIF	1	ELECTRIC SHIFT	
26	32	55496A 1	TUBE ASSEMBLY, CRANKSHIF	1	ELECTRIC SHIFT	
27		31659	BELLOWS, CRANKSHIF SHAFT	1	ELECTRIC SHIFT	
28	54	31766	CLAMP, BELLOWS ATTACHING-L	1	ELECTRIC SHIFT	
29	54	38863	CLAMP, BELOWS ATTACHING-S	1	ELECTRIC SHIFT	
30		53979A 1	GIMBAL HOUSING ASSEMBLY	1		
31		56038	EMBLEM, GIMBAL HOUSING	1		
32	26	31783	OIL SEAL, LOWER GIMBAL HOL	1		
32	26	31783	OIL SEAL, LOWER GIMBAL HOL	1		
33	31	54043	BEARING, ROLLER-GIMBAL HO	1		
34	26	54925	OIL SEAL, UPPER GIMBAL HOL	1		
35	31	21145	BEARING, ROLLER-GIMBAL HO	1		
36	22	22612	FITTING, GREASE GIMBAL HO	1		