



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1641	3767A 3	GEAR HOUSING ASSEMBLY, COM	1		
-	1641	4187A 4	GEAR HOUSING ASSEMBLY, COP	1		
1	1641	3767A 1	GEAR HOUSING ASSEMBLY (H'	1		
1	1641	4187A 1	GEAR HOUSING ASSEMBLY(EL	1		
2	16	57982	STUD, GEAR HOUSING TO D			
3	31	53780	ROLLER BEARING, DRIVE SH	1		
4	10	28634	SCREW, VENT - GEAR HOUSIN	1		
5	12	20260	WASHER, SEAL - VENT SCREW	1		
6	25	54029	"O" RING, GEAR HOUSING (3"	1		
7	43	54402A 2	GEAR ASSEMBLY (DRIVE AND	1		
8	12	54048	WASHER, PINION GEAR TO DR	1		
9	11	55819	NUT, PINION GEAR TO DRIVE	1		
10	45	54396	DRIVE SHAFT	1		
11	25	54030	"O" RING, GEAR HOUSING (3 3	1		
12	15	39808A 1	SHIM ASSEMBLY, ROLLER BEA	AR		
13	31	47669A 1	TAPERED ROLLER BEARING A	1		
14	15	39899A 1	SHIM ASSEMBLY, ROLLER BEA	AR		
15		34127A 1	TRIM TAB ASSEMBLY, GEAR H	1		
15		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1		
16	10	49354	SCREW, TRIM TAB TO GEAR H	1		
17	15	55499A 1	SHIM ASSEMBLY, ROLLER BEA	AR		
18	31	54038A 1	TAPERED ROLLER BEARING A	1		
19	44	54255	PROPELLER SHAFT	1		
20	15	54005A 1	SHIM ASSEMBLY, THRUST RIN	AR		
21		54166	RING, THRUST - BEARING CAF	1		
22	25	34821	"O" RING, BEARING CARRIER	1		
23	31	54036A 1	TAPERED ROLLER BEARING A	1		
24		53936A 1	BEARING CARRIER ASSEMBLY	1		
25	31	54042	ROLLER BEARING, BEARING	1		
26	26	54926	OIL SEAL, BEARING CARRIEF	2		
27	28	30281	KEY, LOCATING - BEARING CAF	1		
28	14	54167	TAB WASHER, GEAR HOUSING	1		
29		54163	COVER, GEAR HOUSING	1		
30		55074	HUB, THRUST - PROPELLER SH	1		
31	12	55073A 1	WASHER ASSEMBLY, SPLINED	1		
32	12	55072	WASHER, CUPPED - SPLINED	1		
33	14	34817	TAB WASHER, PROPELLER NUT	1		
34	11	54034	NUT, PROPELLER	1		
35	10	47557	SCREW, GEAR HOUSING TO DR	1		
36	11	34933	NUT, GEAR HOUSING SCREW	1		