



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62255	BRACKET, MOUNTING (REAR)	2		
2	10	37269	SCREW, MOUNTING BRACKET T	4		
3	13	32993	LOCKWASHER, MOUNTING BRA	4		
4		61854	BRACKET, MOUNTING (FRONT)	2		
5	16	65737	STUD, FRONT MOUNTING BRAC	3		
5	16	65743	STUD, FRONT MOUNTING BRAC	1	INBOARD SEE F4 SERIAL 0000	
6	12	34567	WASHER, MOUNTING BRACKET	1	INBOARD SEE F4 SERIAL 0000	
6	12	54426	WASHER, MOUNTING BRACKET	4		
7	13	32993	LOCKWASHER, MOUNTING BRA	4		
8	11	34933	NUT, MOUNTING BRACKET STU	4		
9	10	30155	SCREW, ENGINE LOCATING (1 1, 2			
10	11	22024	NUT, ENGINE LOCATING SCREW	2		
11	10	47654	SCREW, CLAMP - ADJUSTING TF	4		
12	13	32993	LOCKWASHER, CLAMP ADJUSTI	4		
13	54	47528	CLAMP, ADJUSTING TRUNNION	8		
14	11	29553	NUT, CLAMP ADJUSTING TRUNN	4		
15	14	48467	TAB WASHER, ADJUSTING TRUI	4		
16		52139A	BRACKET ASSEMBLY, MOUNTIN	4		
17	12	48611	WASHER, MOUNTING BRACKET	8		
18		47656	MOUNT, MOUNTING BRACKET	8		
19	10	52156	SCREW, ADJUSTING TRUNNION	4		
20		47518	TRUNNION, ADJUSTING - MOUN	4		
21	11	47525	NUT, JAM - ADJUSTING TRUNNII	4		
22	17	22116	PIN, ROLL - JAM NUT	4		