



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		62767A 7	TRANSMISSION ASSEMBLY, COM	1	B-62767A7 TRANSMISSION ASS	
1		62767A 4	HOUSING ASSEMBLY, TRANSM	1		
3			PIN, SPRING - TRANSMISSIO	1		1
4	22	47902	VENT, TRANSMISSION HOUS	1		
5		64090A 1	TUBE ASSEMBLY, DIPSTICK	1		
6		63037	DIPSTICK, OIL LEVEL GAUG	1		
7			BALL, TRANSMISSION HOUS	1		1
8	22	36373	PLUG, PIPE - TRANSMISSIO	1		
8A	10	47462	SCREW, TRANSMISSION HOUS	6	NOT INCLUDED WITH TRANSM	
8B	13	32993	LOCKWASHER, TRANSMISSIO	6	NOT INCLUDED WITH TRANSM	
9			"O" RING, PUMP TO TRANSMI	2		2
10			"O" RING, PUMP TO TRANSMI	1		2
11			"O" RING, PUMP TO TRANSMI	1		2
12		62718A 2	PUMP ASSEMBLY	1		
13			SEAL, PUMP COVER	1		2
14	22	20025	PLUG, PUMP	2		
15		62722	PISTON, RELIEF VALVE	1		
16	24	62790	SPRING, RELIEF VALVE PISTO	1		
17			"O" RING, PUMP PLUG (3/4" O.	2		2
18	19	62753	PLUG, PUMP	2		
19	10	35386	SCREW, PUMP TO TRANSMISSI	5		
19	10	31984	SCREW, PUMP TO TRANSMISSI	2		
20			WASHER, SEALING - PUMP SC	7		2
21			"O" RING, PUMP (3 7/16" O.D.)	1		2
22		62662	PUMP, GEROTOR	1		
23	10	60300	SCREW, PUMP ATTACHING (3/	7		
24	13	26992	LOCKWASHER, PUMP SCREW	7		
25		63126	FLANGE ASSEMBLY, OIL COOL	1		
26	10	66137	SCREW, FLANGE TO TRANSMI	1		
27	13	26992	LOCKWASHER, FLANGE SCRE	1		
28			"O" RING, FLANGE TO TRANSM	1		2
29		66515A 1	COVER ASSEMBLY, OIL COOLER	1		
30	27	62724	GASKET, OIL COOLER COVER	1		
31	22	36373	PLUG, PIPE - COVER	1		
32	11	21612	NUT, JAM - OIL COOLER	2		
33			"O" RING, OIL COOLER JAMN	2		2
34	10	60300	SCREW, COVER TO TRANSMISS	4		
35	13	26992	LOCKWASHER, COVER SCREW	4		
36		62740A 2	CONTROL VALVE ASSEMBLY	1		
37			BALL, CONTROL VALVE (1/4"	1		1
38	22	28072	PLUG, CONTROL VALVE	1		